This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

+ *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.

+ *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.

+ *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.

+ *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at `http://books.google.com/`

NYPL RESEARCH LIBRARIES
3 3433 06642617 6

THE

Practical Gas Engineer.

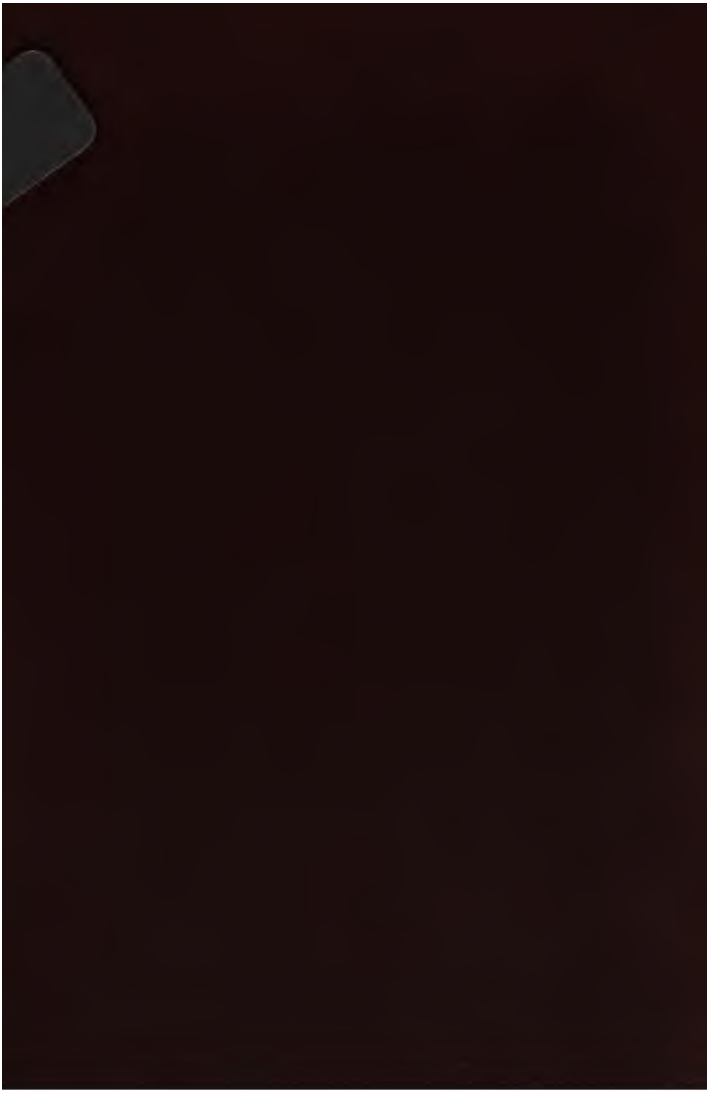

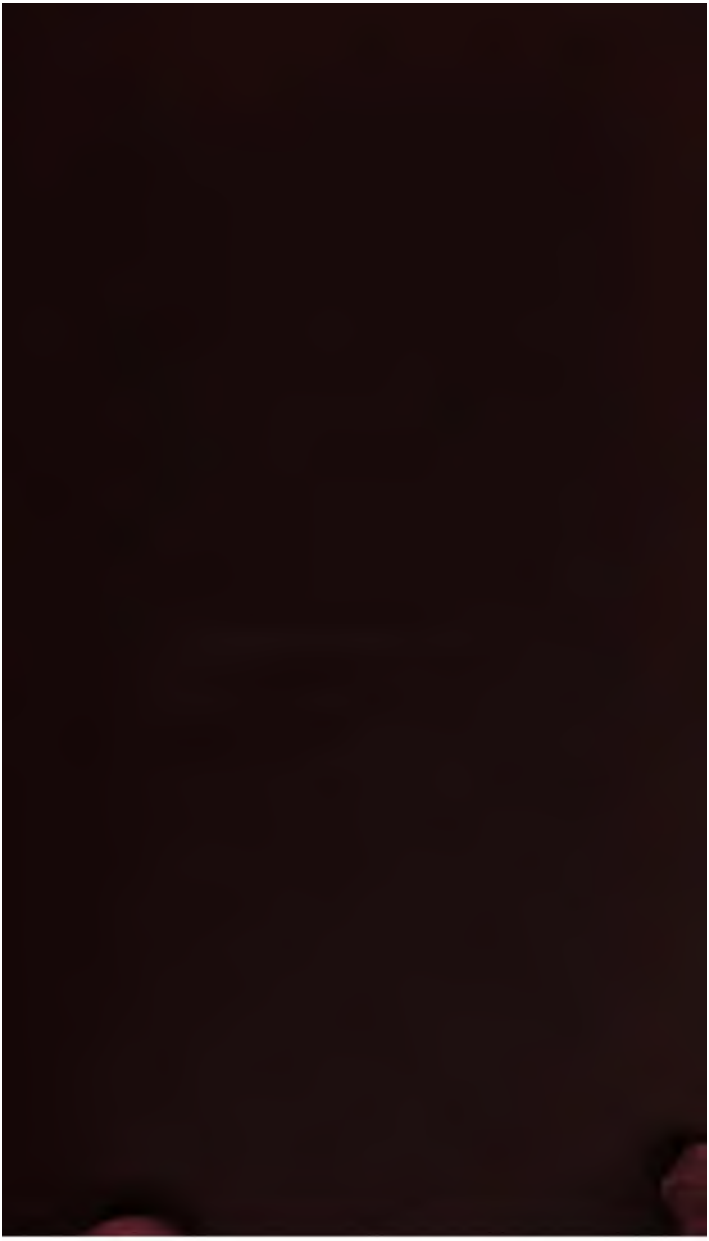

1901

THE

PRACTICAL GAS ENGINEER.

Manuel of Practical

Gas and Gasoline Engine Knowledge,

Covering Errors to be Avoided in the Construction of, and How to Erect, Operate and Care for Gas and Gasoline Engines.

For the Gas and Gasoline Engine Owner, Engineer, or any one wishing Plain and Practical Information on this style of Motor. . . . . .

BY

E. W. LONGANECKER, M. D.

COPYRIGHT JUNE 1st, 1901,
By E. W. Longanecker, M. D.,
Anderson, Indiana.

32764B

PREFACE.

Having many times in the past ten years felt the need of some book that could be placed into the hands of the busy gas and gasoline engineer for the purpose of aiding him quickly to overcome the apparently mysterious troubles that often arise with these engines, the author has for a number of years, during his extensive travels as an expert for one of the oldest and leading gas engine concerns in America, collected such data in reference to CONSTRUCTION, EQUIPMENT and GAS ENGINE TROUBLES as are of special interest to the PROSPECTIVE PURCHASER, the GAS ENGINEER or any one wishing to post himself thoroughly on the management, care, operation and selection of a gas or gasoline engine.

WORTHED '36

The data thus gathered and compiled in this book cover practically all the questions that arise from the purchaser's, owner's and engineer's standpoint.

It is the author's intention that it shall be a ready reference most valuable to all persons interested in modern gas and gasoline engines, and especially to the busy gas engineer, in cases of emergency where his engine refuses to operate successfully and the cause of the trouble is difficult to locate.

In handling the various subjects the author has endeavored to studiously avoid the theoretical, and adhere strictly, in as brief a manner as possible, to the practical questions concerning the purchase and handling of gas and gasoline engines.

I have reason to believe that this book will save many a gas engine owner, not only much time and money that without it would be expended on repairs, but that it will also save him much mental worry and make him and his gas or gasoline engine closer friends.

If it does either it will have attained its purpose.

THE AUTHOR.

PART I.

INTRODUCTORY.

1. A GAS ENGINE may be defined as a Motor or Prime Mover which derives its power from the Combustion, within its cylinder, of a mixture of gas and air in the proper proportion to form an explosive.

2. The COMBUSTION or burning of this charge of gas and air is occasioned under a close or heavy compression, a result of the inward movement of the piston after the charge is admittted and all valves closed. The result of igniting this mixture under the heavy compression is what is commonly called an explosion, which is nothing more than a quick burning or rapid combustion of the mixture.

3. This explosion causes suddenly a high degree of heat within the cylinder, behind the piston, which heat results in a great EXPANSIVE FORCE, creating an initial pressure against the piston of something near 200 pounds to the square inch. This drives the piston rapidly and forcibly on its outward movement, which connected to the fly wheels by means of

pitman and crank shaft, imparts to them their revolving motion and consequent power.

4. FUEL—A number of combustible products are well adapted to be used as fuel in a gas engine.

5. The most commonly empolyed are Natural and Artificial Gas, Gasoline, Benzine, Distillate, etc.

6. These products are known as Hydro-Carbons, and may be considered products of Coal, Wood, Water and Crude Mineral Oil.

7. This style of motor is commonly called Gas Engine, Gasoline Engine, Hydro-Carbon Engine, Naptha Engine, Kerosene Engine and Explosive Engine. It is entirely proper to call an engine that employs gasoline for fuel a Gas engine. A Gasoline engine is practically a Gas engine. All Hydro-Carbon Engines are Gas engines.

8. Gasoline atomized or vaporized with the current of air as it enters the cylinder simply forms a gas and is transformed as such into power. It is gasoline only on the outside, but gas on the inside of the cylinder. So with all the other fluid fuels named. Therefore all the liquid fuels employed in these engines must be by some method first transformed into gas before they are useful.

9. BIRTH OF THE GAS ENGINE.—As early as 1680 Huyghens suggested

the use of gunpowder in an explosive engine. This suggestion engaged the attention of other minds.

10. M. Beau de Rochas advocated a Four-Cycle idea in 1791. But the real practical demonstration which proved that the gas engine could be made a success was made by Lenoir in 1862, and Hugon, Siemans, Boulton, Crosley and Dr. Otto a few years later designed engines that proved the gas engine a success beyond a doubt.

11. FOUR CYCLE and OTTO CYCLE are used synonomously, meaning that an engine completes a Cycle in Four (4) acts, or that it requires four (4) movements of the piston to complete a Cycle, as follows:

1st.—On the outward movement of the piston a charge of gas and air is drawn into the cylinder. In other words, inhaled.

2nd.—On the inward movement, the valves being closed, the charge is compressed in the rear end of the cylinder.

3rd.—Explosion and Expansion of the charge under the compression pressure causes the next outward movement.

4th.—The second inward movement, with the exhaust valve open, exhausts the burnt gases.

12. Therefore two revolutions of the fly wheels are necessary to complete one cycle, consisting of an Inhalation, Com-

pression, Expansion and Exhaust.

13. All Gas Engines are not built on the Four-Cycle plan. There are many Two-Cycle engines now on the market. But the Four-Cycle engine up to the present has been a great favorite over the Two-Cycle with both the manufacturer and user.

14. This is so partly because there are fewer obstructions to be overcome in manufacturng a successful four-cycle, in consequence of which the manufacturers have given more attention to perfecting and simplifying that cycle, and inasmuch as they are meeting the requirements of power users, and are favored with a ready market, they do not care to leave it for the two-cycle problem.

15. A TWO-CYCLE engine, of course, must be differently constructed from a four-cycle. There must be two compression chambers, either in the shape of two cylinders or one cylinder with both ends closed, or the crank chamber may be tightly encased and used as a compression chamber. THE TWO COMPRESSION CHAMBERS are necessary because in a two-cycle engine a charge of gas and air must be received by the engine somewhere at the same time the previous charge is being compressed ready for exploson

16. As before stated, two cylinders, placed

side by side, with the pistons moving in opposite directions at the same time, and with their compression chambers connected with an admission port and valve, will cover the requirements of a two-cycle. The more simple arrangement, of making one cylinder and piston serve the same purpose is most desirable.

17. To make its operation clear I will take for an illustration the single cylinder two-cycle engine, using the air-tight crank case or chamber for a receiving, mixing and compression chamber.

18. The Casting is so made that when the engine is completed the pitman and crank are completely enclosed and work easily understand that if it were not for in this air-tight chamber. You can the piston this chamber and the cylinder would be one continuous irregular enclosed space. The piston, however, working in the cylinder divides the space into two chambers, the cylinder proper and the crank chamber.

19. To the crank chamber there must be an admission port and valve to receive the charges. From the crank chamber to the cylinder there must be a side passage to carry the charge from the crank space into the cylinder. From the cylinder to the outside there must be an exhaust port or valve.

20. Now NOTICE THE ACTION OF THIS ARRANGEMENT. When the

piston moves back into the cylinder it acts as a suction pump to the crank chamber, and if the admission valve were closed it would create a partial vacuum in the crank space. But the admission valve is opened on this inward stroke of the piston and admits a properly mixed charge of gas and air. As the piston moves out toward the crank space it compresses this charge to the end of its stroke, where a valve or port is opened and the compression pressure, in the crank chamber, forces the charge through the side passage, into the cylinder behind the piston. Now when the piston moves on its inward stroke it compresses the charge behind it, and at the same time draws another into the crank chamber.

21. The compressed charge in the cylinder is exploded just as the piston starts again on its inward stroke. The expansive force of the explosion drives the piston with a rapid movement to the end of its outward stroke when the exhaust port is opened, and the burnt gases are let out into the open air. Just after the exhaust port opens and the exploded charge is leaving the cylinder the compressed charge from the crank chamber comes rushing in from the other side.

22. Therefore the exploding cylinder is always receiving a fresh charge at the same time it is exhausting the exploded

one. In other words, emptying out the old on one side through the exhaust port and filling up at the same instant on the other side from the crank chamber.

23. A Two-Cycle engine on each inward movement compresses a fresh charge in the cylinder behind the piston and receives another into the crank chamber. It also explodes a charge and receives an impluse at every revolution.

PART II.

Construction.

24. Parts necessary to the proper construction of a Gas Engine are Cylinder, Base or Bed Plate, Piston and Piston Rings, Connecting Rod or Pitman, Crank Shaft, Fly-wheels and Belt Pulley, Receiving and Exhaust Valves, Igniting Device and Governor.

25. A cylinder head and water jacket might be included, although the cylinder head in some engines is continuous with the walls of the cylinder, and consequently a part of it. The cooling, for which purpose the water jacket serves, may be done otherwise, as with spinous projections cast into the cylinder wall.

26. CYLINDER.—In writing on con-

struction the Four-Cycle engine only will be considered.

27. A Cylinder is made of gray iron castings, with either one or both ends open. If both ends are open a cylinder head is fitted onto one end so as to close it. The cylinder is usually cast with water jacket, although the water jacket may be cast separate and fit onto the cylinder. Exhaust and receiving valve ports are cast into the head or onto the sides of one end of the cylinder.

28. So far as the success or failure of a valve is concerned, location of its port has very little to do with it so long as it opens into the compression chamber. That location is usually selected where it is believed to be most convenient to operate the movements of the valve.

29. Both end and side port valves are used very successfully. A number of successful engines have their valve ports on the top and bottom of the cylinder.

30. Many small engines have the base and cylinder cast in one piece. Other cylinders have lugs, brackets or rests cast on them, which are fitted to a similar casting on the base by means of stud bolts and nuts, and are therefore bolted on.

31. On small engines, where combined cylinder and castings are used and easily handled there can be no reasonable excuse offered against the plan.

32. It is argued by some builders that in case of a break to either cylinder or bed only one need be supplied to repair the break, but the increased amount of machine work and time spent in detaching the old piece and putting on the new about offsets their argument. In cost of repairs there is very little difference.

33. The metal in the walls of the cylinder should be of uniform thickness in its entire circumference and from one end to the other, so as to allow equal expansion and contraction throughout.

34. The bore of the cylinder should be as nearly perfect as machinery, handled by a careful and skilled mechanic, can make it. The igniting end of the cylinder should be smooth and free from projections or sharp corners. The valve ports should be of ample capacity to allow easy admission and free exhaust. Cylinder walls should be from 3/8 inch thickness in a 5-inch cylinder to 3/4 or 1 inch in a 12-inch cylinder. The metal in the walls should be free from sand holes, so as to prevent water leaking into the cylinder.

35. The base or bedplate, as its name implies, is the support for all the working parts of the engine, and should be so designed as to be sufficiently strong at all points where a special strain is liable to be exerted. The base is the support for the cylinder and fly wheels, and should be so arranged as to carry these in the

most simple, convenient, efficient and compact manner.

36. In small engines it is desirable to have the base of sufficient height to clear the fly wheels, so that when the engine is placed on the floor the fly wheels may turn clear by an inch or two.

37. In larger engines, where it is desirable to keep down the weight, for convenience in handling, a sub-base may be substituted.

38. The least carelessness in the construction of the crank or journal boxes determines a partial or complete failure of the engine.

39. The edges, or rather the inner edges of the boxes, should be so dressed as to just admit the crank without practically any end play, and in a position to bring the center of the crank pin exactly in line with the center of the cylinder.

40. The brass or babbit bearing should be so put in as to insure the center of the CRANK PIN in its entire stroke to be in exact LINE with the center of the cylinder. In other words, the boxes must hold the crank shaft at perfect right angles to the cylinder centers.

41. The brass or babbit bearings should always be strictly of the best material obtainable for the purpose. The least variation from perfect alignment is faulty construction.

42. THE PISTON should be from

1-64 in. to 1-32 in. smaller in diameter than the cylinder. It should be a close gray iron casting, free from sand holes. It should be of the drum-shaped variety, closed at one end and open at the other to receive the cross head end of the pitman or connecting rod.

43. The cross head lugs which carry the pin to which the pitman is connected should be located near the center of the piston length. If anything, a little nearer the open than the closed end. It is bad practice to carry the weight necessary to construct a proper crosshead with the weight of the pin and part of the pitman too near the rear end of the piston.

44. There is no rule governing the length and weight of a piston. Each manufacturer constructs a piston of length and weight after his own ideas. The tendency is to make them extremely long, which necessarily makes them too heavy to be of the best service.

45. The longer and heavier a piston the more friction in the cylinder, and consequently the more power is required to move it, and the more work will be thrown on the crank boxes and shaft in reversing it, which imparts an end motion to the entire engine that is difficult to balance.

46. I favor a piston of medium length, not too long nor extremely short. An upright engine admits of a shorter pis-

ton than a horizontal, because a horizontal engine carries the weight of its piston on the cylinder walls, and the longer the piston the less damaging is the wear to the cylinder. The weight is distributed over more surface.

47. An upright engine carries its piston weight principally on the crank shaft, and therefore should be as light and short as the force with which it has to deal will allow.

48. The Rings on the Piston serve to prevent the escape of the expansive force past the piston, which is necessarily somewhat smaller, so as to allow its free and easy movement in the cylinder.

49. The packing rings are made larger than the cylinder. A piece from ½ to 1 inch in length is cut out, so that when the ends of the rings are pressed together it reduces the diameter of the ring to that of the cylinder, but leaves an outward spring to the ring.

50. After cutting a piece out of a perfect ring and pressing the ends together it will make an oblong instead of a perfect ring, and consequently it can not fit a perfect cylinder. After the ring is cut the ends should be pressed together and again turned to a perfect ring, on the outside at least. It is to be regretted that all manufacturers do not follow this rule in making their rings.

51. An oblong ring will wear the walls of the cylinder at two opposite points.

only, which will soon wear the cylinder oblong in shape.

52. Such rings also fail to serve their purpose by allowing the expansive force to pass the piston. It is as important to a purchaser to know how the packing rings are made as to know that the journal boxes are in exact line from every point with the cylinder.

53. He should always ask an agent or manufacturer who is trying to sell him an engine this question: How are piston rings made? And if they do not make a plain answer, or if they seem to evade the question, it is just as well for the purchaser to give that engine no further consideration. Because if a manufacturer is careless with his cylinder rings and journal boxes he is liable to be careless with every part of his engine.

54. The cylinder rings and journal boxes are not the only safe guides to a purchaser. As we go along with these points on construction you will see that the purchaser will find many things to open his eyes. It is intended to make this little book the purchaser's friend as well as the men who have charge of an engine. If the purchaser were more exacting in his requirements the manufacturer would build him a better engine, and a portion of the gas engine trouble would cease.

55. A purchaser's suspicion may be aroused that a ring is not properly made

if there is a coughing noise and smoke coming out of the open end of the cylinder at each explosion of a charge. If by drawing out the piston he finds the rings are bearing and worn only at the cut and at a point opposite he can rest assured that the rings were not turned after cutting.

56. PITMAN OR CONNECTING ROD.—Very few gas engine builders use the slides or crosshead guides as used in the steam engines. The pitman is generally connected one end to the crank shaft, the other direct to the piston. It is made of steel casting or steel forging. The latter is less liable to defects, and therefore more desirable.

57. It should be centered, turned and made as light as possible, with ample strength to carry the power transmitted through it. The center lines of the crossheads and wrist boxes, which are usually made of brass, should be at exact right angles to the center line of the connecting rod.

58. The plan of attaching the wrist boxes to the connecting rod, by means of two steel bolts, is probably the most convenient and satisfactory method of attaching these boxes.

59. Owing to the slight motion required at the crosshead many builders consider a simple bushing amply sufficient, although some are using bearings such as the strap and key variety or one similar

to the wrist boxes.

60. CRANK SHAFT.—The question of crank shaft construction is a very important one. The center line of the wrist pin should be exactly parallel with the center line of the crank shaft. The least variance from this necessarily makes a bad running engine.

61. I have found wrist pins in boxes, that were constantly running hot, not only out of line with their shaft, but also of different diameter at the ends, one end of the pin being considerably larger in diameter than the other. One or the other of the defects here mentioned is usually the cause of a constantly HOT RUNNING wrist box.

62. Improper lining of the crank with the cylinder or the wrist boxes fastened on the pitman out of line are faults that should not be overlooked.

63. The arms of the crank shaft should be of exactly the same thickness, so as to bring the wrist pin in such a position that the center line of the cylinder will divide it into two exact halves in every part of the entire length of its stroke

64. LENGTH AND DIAMETER OF WRIST PIN.—The best rule to follow is to make the working area of the crank pin so that there is no more than 400 pounds average pressure to the square inch. Whether you secure this area by a long slim pin or a short thick pin does not matter much, provided extremes are

avoided and journal boxes are of suitable length. Builders generally agree that the diameter of the pin should be from 1 to 1¼ times that of the shaft.

65. The length of the journal boxes should be not less than 2½ times the diameter of the shaft.

66. CRANK SHAFT DIAMETERS.—No uniform rule is followed. But gas engine crank shaft diameters in America compare very favorably with a rule based upon cylinder diameter and maximum pressure within the cylinder. The average diameters run a little "shy" of the rule.

67. WEIGHT AND DIAMETER OF FLY WHEELS.—Very much depends on the speed of the engine as to weight that should be carried. At a medium speed, which may be based on about 225 revolutions for 25 H. P. to 375 for a 2 H. P., one hundred pounds to the horse power will not be very far out of the way. The diameter may range from 28 in. on the small engine to 60 in. on the larger size. The weight above referred to, of course, is divided between the two wheels.

68. BALANCING AN ENGINE.—This is a subject that is not so easily disposed of as it might appear. The majority of manufacturers simply use a weight in the rim of the fly wheels directly opposite the arms and wrist pin on the crank shaft, or, what is practically the same

thing, they core out the rim at a point directly opposite from that where the weight should otherwise be.

70. Some builders think the crank shaft is the proper place to attach the balance weights.

71. If carefully done the weight in the rim is equally as good if not a better method than the other. But it is still better to balance the pitman and crank at the rim of the fly wheel, and the piston movement by a sliding counter weight operated from an eccentric on crank shaft.

72. This would necessitate considerable additional mechanism, and therefore is objectionable unless made to serve the purpose of pump, piston or air compressor.

73. A pump or an air compressor in connection with a gas engine is an excellent combination. Unfortunately not every one who has use for a gas engine has need of a pump or compressor. But you can "whack the nail squarely on the head" by making a double cylinder engine with one cylinder on each end of the engine base and a double crank shaft in the center, so that both pistons move away from and towards each other at the same time.

74. This would make a balanced engine without weights and a better power in every way, but more expensive to build and less economical in fuel consumption.

75. VALVES.—The ordinary four-cycle engine usually has three valves, the exhaust valve, the receiving valve and the fuel valve. The exhaust and receiving valves are generally placed at a point on the cylinder head so that their ports lead directly into the igniting or exploding chamber. These valves are usually of the mushroom type, and are operated by means of suitable levers in connection with the cams on a revolving side rod, or by a punch rod from a cog gear driven by the crank shaft.

76. As to the manner of operating these valves, I think the advantages are in favor of the side rod on the engines of the horizontal type and with the gear and punching mechanism on the vertical type of engine.

77. The principal reason for this distinction is that it is more desirable to have the valve stem work in a vertical or upright than in a horizontal position. If a valve stem works in a vertical position the weight of the valve brings it always squarely into its seat, and the wear on the seat, valve and stem are likely to be uniform at all points. But if the valve is so placed as to move in a horizontal position the weight of the valve pallet has a tendency to wear the stem and seat on their under side only, and therefore liable to soon cause trouble.

78. The valve chambers can be bolted

to a horizontal cylinder in a vertical position and operated by suitable levers acted on by cams on the side rod. While on the vertical type of engine the valves are adjusted to the cylinder in a vertical manner directly over the crank shaft or gear, which operates them with a direct acting mechanism.

79. You will notice I say the valve chambers should be bolted or adjusted to the cylinder. They should not be cast on. My advice to any one purchasing is to shun an engine where valve chambers, or at least valve seats, cannot be replaced by new ones. Valve seats are liable to wear out and crack by the continual wear and high heat to which they are subjected. The valve pallet and its seat should also be in such a position as to be easy of access. They need to be examined and cleaned occasionally.

80. The exhaust valve on large engines should be watered, otherwise its seat is soon liable to give way under the excessive heat. The cold charges entering at the receiving valve serve as a cooler for it.

81. A valve mechanism may be so designed as to use alternately either gas or gasoline as fuel, but not both at the same time. A valve or set of valves may be arranged so as to shut off one and turn on the other, thus changing fuels without stopping the engine.

82. The conditions requiring such an

immediate change are so rarely met with that I doubt the propriety of fitting an engine with such a complex arrangement. Where a change is really necessary there is always sufficient warning and ample time to prepare for it. The two fuels are of a different chemical composition, and the blending of their elements with a volumn of air so as to make a ready explosive would be extremely difficult, and therefore impractical to attempt their combination or use in conjunction or at the same time.

83. To go into the details of describing the various fuel valve mechanisms now used would require more space than could be allowed in this little work. Each builder claims some superior point of merit in his method of feeding the fuel, but it should not be forgotten that other reliable builders may have other points as good. It may be sufficient to say that the gas valves, and their operating mechanism, are generally so arranged as to open the valves when the outward movement of the piston is drawing a current of air into the cylinder, and partly by the force of the gas pressure and partly by the suction produced by the piston the gas is admitted to the current of air and mixes with it as it enters the cylinder.

84. Gasoline valves and their methods of handling fuel are a little more complicated, but in most cases it is the cur-

rent of air, also, by its suction power, that draws sufficient gasoline from a needle point or valve to charge the air current. In some instances the gasoline is forced into the air current by means of a small pump. Some kerosene engines take a charge of air only, and after compressing it, the kerosene is sprayed into the compression space and immediately fired.

85. A purchaser needs to familiarize himself with the function of the gas or gasoline valve on his engine and its method of feeding the fuel. It requires only a little close attention and common sense to learn in half an hour all that is necessary to know about the feeding, and regulating the fuel to the engine.

86. The fuel may be properly fed and regulated and yet the engine refuse to go. Therefore the fellow who uses common sense enough to learn the proper feeding of gasoline or fuel will get into trouble if he concludes that he has learned it all. This is just the position in which I have found many a fellow. And this brings us to that mechanical part of the engine which probably is more often the source of trouble than all others combined, and that is the IGNITING MECHANISM.

87. You no doubt are somewhat familiar with the two principal methods of ignition, namely the HOT TUBE and the ELECTRIC SPARK method. The fel-

low with common sense about getting his fuel fed just right must also know whether he has a sufficient spark or Tube hot enough to fire the charge of fuel.

88. In the electric spark method, which is in greatest favor in America at this time, it is necessary to have a spark of sufficient intensity to ignite the charge, and it must be made at just the right time.

89. There are two kinds of spark used now, which are known as the Contact Spark and the Jump Spark. The latter is used more particularly in high speed engines or automobile work, the former in stationary engines, in which we are mostly interested.

90. The contact spark is made by starting an electric current and then instantly breaking it. If a battery or other source of elecricity is connected up properly with two wires, one end of each wire attached to the battery, one to the positive and the other to the negative pole, the battery remains practically inactive so long as these wires do not come in contact with each other. But the moment the two loose ends of the wires are brought in contact with each other a current of electricity is made or started over these wires. Contact of the terminals, then, is known as making the current. The parting of the terminals is breaking the current.

91. If a spark coil is connected into

this circuit, whenever the terminals are parted an electric spark or flash is made, which does the igniting of the charge. The terminals or contact making points, therefore, are not necessarily the ends of the wires, but any piece of metal to which the ends of the wires may be attached.

92. The current can be carried any reasonable distance over metal that is a good conductor or carrier of electricity. Of course it is always necessary before a current is made that there is a contact of the terminals or a connection between positive and negative poles.

93. The electric terminals or contact points are therefore necessarily in the igniting chamber of the engine, and at least one of them must be insulated from that part of the cylinder wall through which it passes.

94. In the construction of the sparking apparatus I think it is best to use platinum for the terminals or contact points on account of its quality to withstand a high degree of heat, although some manufacturers use common steel or gray iron points with a view to frequently and cheaply renewing them.

95. The insulation of one of these terminals should be complete, practically indestructible and proof against heat and moisture.

96. The best material for insulating purposes is lava, porcelain, mica and glass. If melted or fused properly around the

terminal sleeve I regard glass much better than the others. A successful and effective insulation may be made with either of the others, although probably not as durable.

97. The mechanism that operates the movable point or terminal should be so designed that the contact will be of short duration, that the break or separation can be easily timed so as to make the spark earlier or later, that the terminals always remain separated between the act of sparking, and so as to make a contact when the engine receives a charge.

98 The movable contact point should approach the stationary gradually, press it firmly and sparate instantly. This is known as the Kiss spark or contact. A wiping spark is made by what is known as a wipe contact, which is used by some builders.

99. The spark is indirectly controlled by the governor on some engines. Usually the governor controls the exhaust or receiving valve movement, and this valve movement is made to incite the movement of the sparking mechanism only when a charge is taken into the cylinder. On other engines no attempt is made to govern the number of sparks at all, but a regular succession of sparks occur whether the governor admits a charge or not.

100. GOVERNORS.—There are a number of different types of govenors in use

among the gas engine builders. The most common are the fly wheel governor, the pendulum governor and the centrifugal or ball governor. The latter is probably the most popular and effective. However, the others operate quite satisfactorily.

101. No governor of the hit and miss pattern should act sluggishly, but should be sensitive enough to avoid two charges in succession when the engine is running without a load. One impulse should be sufficient to drive the engine over from one to five misses, owing to the speed of the engine. The lower the speed the fewer number of impulses allowed by the governor on an empty running engine. The higher the speed the more impulses.

A governor that cannot be made to throw off the succeeding charge after an impulse on an empty running engine should be rejected.

102. To be more explicit, a hit and miss governor that allows an empty engine two, three, four or five impulses in succession, and then throws off as many or more, certainly cannot be recommended unless it can be adjusted to do its work properly.

103. A good governor will handle an empty engine at, say, three hundred revolutions per minute, one on and two off. In other words, one impulse and two misses; at 200 revolutions, one on and four off.

104. Of course you understand a governor that operates on the proportional charge, or throttling plan, allows continuous and successive impulses, light or heavy according to the load on the engine, by throttling the mixture of gas and air.

105. I consider the throttling governor a success. It is generally conceded by builders that the hit and miss governor is the most economical in fuel consumption, but I do not regard it necessarily so. The American inventor, if he has not already done so, will invent a method of injecting the fuel in such exact proportions as to give the proper strength to the impluses to carry a uniform speed under a variable load, and at the same time use only the amount of fuel necessary, and therefore reduce the fuel consumption to the minimum.

106. There can be no question of the advantage the throttling governor has over the hit and miss governor in point of steady power. The principle objection to the hit and miss governor is the variable speed it imparts to the engine.

PART III.

Equipment.

107. SETTING THE ENGINE.—Many purchasers fail with the gas engine be-

cause of their desire to install it with the least expense possible.

108. This is a great mistake. After buying a gas engine one should go to the expense of installing it properly.

109. If the engine is stationary it should have a tight room, all to itself, free from dust and with plenty of light.

110. Too frequently we find purchasers placing their gas engines in some dark corner of the building or in some old damp cellar that has been abandoned on account of its unfit condition to be used for any other purpose. They argue that if "I can use it for my engine I save space, and therefore economize." This is surely false economy.

111. I insist that if the purchaser decides to use such abandoned space in which to locate his engine he would at least save time and money by going to the expense of partitioning the space off into a room large enough for the engine, and keep on until he has transformed his engine room into the snugest, neatest, cleanest and most convenient spot about his building, and then see that it is kept in that condition. Why not? The engine is surely the head of his machinery plant, from which he expects to derive a profit. When the engine stands idle all his machinery is idle. He can make his engine a source of profit or loss just as he will give it good or bad treatment.

112. THE FOUNDATION should be in

keeping with everything that is good and substantial. Bolting the engine fast to "any old floor" is bad practice. But alas! Gas Engines are advertised to set anywhere, on any floor or in any cellar. There are foolish advertisers as well as foolish purchasers. A careful purchaser will not buy of a reckless and careless advertiser who makes unreasonable or extravagant claims for his engine.

113. I would have every gas engine purchaser figure on a stone or brick and cement foundation if it is at all practicable. If nothing but a floor location can be had I should recommend good heavy timbers bolted to the floor of sufficient length to strengthen the floor for considerable distance around the engine, then bolt the engine to these timbers.

114. The only object in a foundation is a solid setting for the engine. If you haven't got a solid foundation you might properly say you have no foundation. A good engine room and a good foundation is an excellent beginning.

115. The depth of the foundation below grade line depends somewhat on the condition of the soil. It should always go below the freeezing line and as much below as is necessary to get a firm base. Ordinarily from three to four feet is sufficient for small engines from four to twelve horse power. Larger sized engines from 15 to 40 h. p. from four to six feet is not too much.

116. DIMENSIONS OF A FOUNDATION.—A good rule is to make the length of the foundation in the bottom twice the length of the engine base. The width in the bottom may be two and a fourth times the width of the engine base. The foundation should be brought up on a batter or incline from the bottom to the floor line or level of the ground.

117. It should then be covered with a capstone from eight to twelve inches thick, according to the size of the engine. The foundation may be capped with good heavy timber where a stone cannot be conveniently had. You understand, of course, that it is always desirable to have the capstone or timbers from two to six inches wider than the engine base and from six to twelve inches longer, so that when the engine is placed on top the cap extends beyond the engine base from one to three inches on each side, say one inch for 4 H. P. and three inches for a 40 Horse Power.

118. The height of the foundation and capstone above the ground level or floor line should be sufficient to clear the fly wheels or prevent them from hanging to the floor by from two to three inches.

119. A concrete foundation if properly constructed is the best. While foundations are usually built of brick or stone laid in cement a foundation may be of concrete, mixed as follows: One part of

cement, two parts sand, five parts finely cracked stone or coarse gravel, is first class. Foundations built with freezing mortar or concrete are no good. Avoid freezing weather while building your foundation.

120. ANCHOR BOLTS.—The number and size are usually determined by the builder of the engine and indicated by the holes he drills into the engine base to receive them. They should be long enough to extend from the bottom of the foundation to from two and a half to four inches above the capstone or timber.

121. They should be screwed into a good sized iron anchor plate at the bottom and threaded on top to receive a nut. An anchor plate six to eight inches wide and ten to fifteen inches long with a hole in the center tapped out or threaded, into which the rod is screwed and riveted makes an excellent anchorage.

122. It is regarded good practive when setting the anchor bolts before building the foundation to set the anchor plates on small base stone or solid wooden block as large or larger than the anchor plate. Also to slip a piece of iron pipe (with an inside diameter an inch larger than the rod) over each bolt. This pipe should extend from the anchor plate to the top of the foundation, but not to the top of the rod.

123. A TEMPLET should be made with

holes the exact diameter of the rod, and distances between them exactly as the holes in the engine base. The nuts are then run on to the top of each bolt down far enough so as to let about two inches of the bolt extend above the nut. The bolts are then set in position and stayed at the top by slipping the top of each into the corresponding hole in the templet, the nut serving as a rest for the templet. Line up the bolts with the line shaft or building, stay the templet in that position and proceed to build the foundation around the bolts.

124. After the foundation is completed and it is determined that each bolt is in exact position to enter the corresponding hole in the engine base, the pipe around the bolt may be filled with slush cement, which when set will stay the bolts firmly.

125. Three or four days after the foundation is completed, and the cement firmly set, the engine may be placed in position and bolted down for work.

126. LINING UP THE ENGINE with the shaft, and vice versa, is of the utmost importance, and it should be done just right, if the Drive belt is expected to run true and give good service. Therefore if the line shaft is in position it is well to take the precaution to see that the drive pulley on the engine and the drive pulley on the line shaft are in line before bolting down the engine.

127. This is done by stretching a line from rim to rim on the outer edge of the line shaft pulley and extending the line to the outer rim and across it on the engine pulley. This line should just touch the two opposite points on each pulley.

128. A better way is to line the engine shaft with the line shaft as follows: Drop two lines from the same edge or side of the line shaft as far apart as the length of the engine shaft. Drop the weight on end of each of these lines into a pail of water on the floor to keep them from swinging. Then measure with tape line, or, better, with pole, from each line to the center on each end of engine shaft. These distances should measure exactly alike.

129. PIPING OR CONNECTING UP AN ENGINE consists of piping up the fuel, piping away the exhaust and piping water to and from the engine, if water is used for cooling purposes, and it is practically used for cooling all stationary engines up to the present time.

130. In making the WATER CONNECTIONS pipe of the size indicated by the ports in the water jacket should be used unless hydrant water is employed under pressure, then smaller pipe may be used.

131. Valves should always be fitted into the pipe line so as to allow shutting the water off for drainage purposes.

132. When a cooling tank is used the

valves should be as near the tank as they can be placed, so that the pipes leading to the engine can be drained.

133. A pipe with a valve and union should lead from the lower part of the tank to the threaded inlet port, somewhere in the under part of the water jacket of the engine, and a pipe from the outlet port in the top of the cylinder or jacket to the top of the tank.

134. The water passes from the tank to the engine through the lower pipe, and as it becomes heated it raises into the upper pipe and flows back into the top of the tank.

135. This circulation is caused by one of Nature's laws. Cold water is heavier than hot water, and as the cylinder heats the water it gets lighter and the cold and heavier water naturally crowds in below and forces the heated water through the upper pipe to the tank. Therefore the hottest water is always at the top of the tank.

136. PIPE CONNECTIONS FOR THE USE OF HYDRANT WATER are as follows: The inlet pipe from the hydrant to the same point on the engine as in the tank system, with valve and union to guard against freezing by draining the cylinder and pipes attached.

137. The overflow pipe from the top of the cylinder should be led into a waste trough or pipe somewhere in such a manner as to expose to view the stream of water leaving the engine.

138. The pressure from a hydrant is often sufficient to force too much cold water through the water chamber, keeping the cylinder too cool, and consequently a loss of power. The valve in the inlet pipe should be used to throttle the stream to the engine.

139. Where a very limited quantity of water only can be allowed, as in portable engines or automobiles, a circulating pump and fan are sometimes used.

140. PIPE CONNECTIONS FOR FUEL IN A GAS ENGINE are: Regulator, Gas Bag, valve or stop cock and piping of the proper size to meet the requirements of the engine.

141. Where natural gas is used for fuel it is always desirable to use a REGULATOR. However, we find purchasers who prefer to run their chances of having all kinds of trouble with their engine, which a gas regulator would obviate, rather than go to the expense of putting in a gas regulator. It is needed where gas pressure is liable to vary.

142. Either the gasometer or one of the many diaphragm and valve regulators may be used successfully, provided they allow a sufficient volume of gas at low pressure, say, for instance, not to exceed eight ounces to the square inch.

143. The stop-cock, gas bag and regulator are connected into the pipe from the engine outward in the order just named. First, a short nipple of pipe, say from

four to six inches long is screwed into the inlet port on the engine, onto it the stop cock, then another piece of pipe to bring the gas bag at some convenient and suitable point, then the gas bag (and it is better to have it within two or three feet of the engine), then more pipe and finally the regulator.

144. The GAS BAG may be a good rubber bag made completely of rubber, or it may be made of an iron frame with rubber diaphragm such as some engine builders use.

145. When gasoline is the fuel there are two common methods in use for bringing the gasoline to the engine. One called the GRAVITY SYSTEM and consists of piping the elevated supply tank to the engine and letting the gasoline into the engine through suitable valves. In this method gasoline is supplied to the engine by its own weight or gravity.

146. FITTINGS FOR GRAVITY METHOD.—If the gravity method is used there is an admission valve on the gine, re-enforced usually by a needle valve. The supply pipe, including globe valve, is connected from the inlet port on these valves to the supply tank, which is elevated four or five feet above the engine and placed somewhere on a shelf on the walls of the building or some suitable place outside. The globe valve should be placed near the admission valve so as to doubly insure the complete shut-

ting off of the gasoline from the engine when not in use.

147. The other, THE PUMP SYSTEM; in which the arrangement consists of a small pump fitted to the engine, which is designed to be piped to the supply tank outside of the building, and to draw the gasoline from the tank and force it into the Mixer of the engine as it needs it.

148. The supply tank in this instance is located somewhere from three to six feet below the engine, and an overflow pipe is connected to it from the engine for the purpose of returning to the tank any over supply that may be forced up by the pump.

149. There is a pipe connection between the lower part of the supply tank and the suction port or valve on the pump and an overflow pipe from the mixing or supply cup on the engine to the top of the tank. The tank is so placed as to allow drainage of all the gasoline in the pipes, back to the tank when the engine is not in use.

150. From ¼ to ½ inch pipe is used ordinarily, according to the size of the engine.

151. Fire Insurance Companies require the pump system, with the tank placed a certain distance away from the building. But the gravity method is just as effective in supplying the engine with fuel and has the advantage of less mechanism to get out of order. Of course

good threaded pipes and absolutely tight joints should be insisted on in these pipe connections for gasoline.

152. EXHAUST CONNECTIONS.—When an engine is installed in a building the real object of exhaust pipe connections is to get the burnt gases and the noise from the exhaust outside of the building. And in as much as the noise is very undesirable in many localities, it is the custom of nearly all engine builders to supply with their engines a large Iron Drum,into which the pipe from the engine is connected and which serves as a muffler to the exhaust reports.

153. MUFFLERS of different kinds are used on portable and automobile engines. They are usually arranged to screw onto the end of the exhaust pipe and consist of an iron casing, enclosing a series of small cavities, which are freely connected with the inlet and also with the many small openings which serve as an outlet. The object in such a muffler is to break the force of the exhaust pressure and let it into the open air through many small openings.

154. PIPING THE EXHAUST INTO A FLUE OR CHIMNEY OF A BUILDING.—There may be very serious objections urged against this practice. Unless the flue has a large caliber, with a good draught, it should not be considered at all.

155. There is always more or less ex-

perimenting necessary where an inexperienced hand is learning to run a gas engine. And he may turn the engine over, admitting charges and forcing them out of the exhaust pipe into the flue a number of times before igniting one of them, and when the ignition does occur the flue is charged with gas, which lets go with such force as to wreck the flue and sometimes the building.

156. The sooner gas engine builders and purchasers get the idea out of their heads that "any old thing" is good enough the better it will be for every one concerned.

157. Piping the exhaust into a well or cistern if properly done is all right. I should suggest, however, in such instances that before it is done it is known that water never raises to a point to interfere with the exhaust.

158. In fact, to be on the safe side the entire space in the cistern or well should be free from water at all times. A good tight cement covering with a good sized vent should be arranged.

159. A Box two by two by four feet buried in the ground endwise and filled with clean pebbles or stones in sizes from that of a hen's egg to that of a man's fist makes an excellent muffler for an engine up to 25 H. P. The exhaust pipe should, of course, be led into the lower part of this muffler and water excluded at all times.

160. A box two feet square inside, ten

feet long, made of heavy (two inch) plank, without bottom ,buried in the ground, and the exhaust from the engine piped into one end, and a short pipe from the other end as a vent makes a very effective muffler. No stone is used in this box, just the hollow in the box with ground floor. The entire box should be buried to a depth of two feet.

161. The exhaust connections are simply a pipe of the proper size leading from the exhaust valve port to the exhaust drum and from another port in the drum to the outside of the building, or underground muffler if one is used, and thence to the outside.

162. It is well to place the exhaust drum as near to the engine as possible and get to the outside of the building by the shortest convenient route. Long exhaust pipes have no tendency to improve the running qualities of the engine.

163. The end of the exhaust pipe should be left free and open, where an exhaust drum is used, except that it is good practice to screw a "T" onto the end of the pipe and a short nipple into each end of this "T," which serves the double purpose of protecting the pipe from snow, rain and ice, and relieves the exhaust by two openings instead of one.

164. For the purpose of explaining more fully, I wish to modify my previous statement against the use of long exhaust pipes. The advice is proper with prac-

tically all engines built in this country up to the present time.

165. SCAVENGING ENGINES.—Plausible claims are made for the scavenging engines, some of which are coming into use. The object of scavenging is to free the clerance space or combustion chamber from burnt gases each time before another fresh charge is admitted.

166. It is recommended that an exhaust pipe of sufficient length and proportions will cause a succession of waves in the outward rush of the exhaust gases, which tend to create a partial vacauum in the clearance space, and thereby practically free it from burnt gases. I will not go into detail of the Scavenging engine, as practically all are non-scavenging up to the present time, and there is no indication of the scavengers coming into immediate use, in America at least.

167. TUBE IGNITOR.—The tube ignitor consists of a TUBE closed at one end and threaded and open at the other, a cast iron chimney, a gas or gasoline burner, pipe connections from the gas supply to the burner or to a small gasoline supply tank elevated five or six feet.

169. The tube is anywhere from five inches to twelve inches long and from ¼ to⅜ inches in diameter. It is made either of common gas pipe or nickel alloy, sometimes called composition tubing. The threaded and open end of the tube is screwed into an opening which

communicates with the interior of the cylinder or firing chamber. This makes a continuous passage from the combustion chamber up in the hollow of the tube to its closed end.

170. It is intended to keep this tube at a red heat while the engine is running. This is done by means of the cast iron chimney, which is fitted on so as to entirely enclose this tube, and a burner fitted into the lower part of this chimney so as to direct a jet or Bunsen flame against the lower end of the tube.

171. The top of the chimney may be capped with numerous small vent holes in the cap. The inside of the chimney is lined with asbestos sheet, the object of which is to retain the heat and confine the flame immediately around the tube as much as possible.

172. The burner should be so constructed as to deliver a bright blue flame around the tube, which should become heated to a cherry red heat in from three to five minutes after it is lighted. The burner is usually fitted with a valve with which to control the flame, but the pipe connection from the burner to the gasoline supply tank or to the gas supply should contain a valve as a means of shutting off the full supply from the burner when the engine is not in use.

173. The object in elevating the gasoline supply tank is to give sufficient pressure at the burner or generator to throw the

jet of gas with some force against the tube.

174. The point in the length of the tube at which the flame should be directed depends on the compression pressure in the cylinder. If there is a high compression pressure the firing point on the tube should be naturally higher up because the fresh charge forces its way higher up into the tube on a high than on a low compression.

175. You understand that the tube always remains filled with burnt gases when the ordinary tube igniting engine exhausts the burnt charge. The fresh charge then has to crowd up against this burnt gas in the tube, which serves as a cushion, and drives it into the upper part of the tube until the fresh gas meets the red hot part of the tube, when ignition occurs. You will therefore see that if the compression in an engine is light it cannot force the fresh charge as high into the tube, and consequently the tube should be heated lower down.

176. Some builders are now making adjustible chimneys, to which the burner is fastened, which can be moved up or down and fixed so as to direct the flame against any point on the tube to suit the compression.

177. What would I do if I had an engine with a fixed flame point? I should try tubes of different lengths until one was found that gave the best results. If pre-

ignition occurs it may not be possible to correct the trouble by changing the length of the tube, and something must be devised to raise the flame point higher on the tube.

178. ELECTRIC IGNITOR.—The electric igniting outfit consists of a SPARK COIL, a CURRENT BREAKER or SWITCH, from fifteen to forty feet of insulated copper wire, about No. 14, a battery or small dynamo, which generates the current, and the sparking mechanism on the engine which has already been described.

179. THE SPARK COIL is a bundle of soft Iron Wires, cut all the same length, anywhere from five to ten inches long. The ends of this bundle of wires are inserted into a round hole, in a small block of wood, of just the exact size to receive alll the wires and hold them firmly together in the shape of a round bundle.

180. This bundle is covered with a sheathe of pasteboard, around which is wrapped closely and evenly from end to end between the blocks successive layers of one continuous piece of insulated wire. The two ends of this insulated wire are fastened to separate binding posts which are mounted on one end of the blocks. These blocks are then screwed firmly to a small base board, so as to hold all parts of the coil firmly in position.

181. It serves the purpose of resistance

to the current, without which an igniting spark cannot be made.

182. If the length of insulated wire is properly proportioned to the bundle of soft wire the coil also serves to allow a shorter contact of the terminal points, which in turn saves waste of current and wear of the points, which are both items of considerable expense if not carefully guarded. A short coil four to six inches long meets all the requirements.

183. A SWITCH is simply a block of wood or porcelain mounted with two binding posts and a connecting lever, which is permanently connected to one binding post and may be connected or disconnected with the other binding post at will.

184. Its purpose is to switch the current on to the engine for work or to cut it out and insure against short circuit when the engine is not in use.

185. ELECTRIC CONNECTIONS to the sparking device on the engine.—One end of the wire which is to carry the current should be connected to the binding post on the insulated terminal or electrode. the other wire is attached to the other binding post, which is usually placed at some convenient point on the engine by the builders.

186. If there is but one binding post supplied on the engine, then the second wire may be attached firmly to any bright point on the engine which is convenient,

or it may even be fastened around one of the gasoline or water pipes if they are not painted.

187. The insulation must always be stripped off the end that is to be fastened and the connection made with the bare end of the wires.

188. The wire from the insulated terminal binding post is then carried to the spark coil and connected to one of its binding posts. From the other binding post on the spark coil a piece of wire is carried to the first cell of the battery and connected to its positive or carbon binding post or to the same on dynamo.

189. This makes one connection between the engine and the battery or dynamo, whichever is used for ignition purposes.

190. Another wire is carried from the negative point on dynamo, or zinc binding post on battery, to one of the switch binding posts, and from the other switch binding post to the engine. The switch may be fastened at some convenient place on the wall.

191. The two wires from the battery or dynamo to the engine, one containing the coil and the other the switch, completes the circuit.

192. IN CONNECTING THE BATTERY all the cells between the first and last must be connected up in a series with short pieces of insulated wire, as follows: From the zinc binding post on the first cell to the copper binding post

on the second; from zinc on second to copper on third, and so on until all are connected.

193. If a FLUID CELL BATTERY is used it must be charged, which consists of first making a solution with the chemical used for that purpose and soft water. After each cell is nearly filled with this solution the metal bases, such as zinc and carbon, which are usually attached to the lid of the cell, are lowered into the solution in the cell. Then it is ready to be connected up in the series. All fluid batteries are accompanied with instruction sheets.

194. It has been the general custom to use fluid batteries, but several DRY CELL batteries have recently been introduced which bid fair to become a formidable rival of the fluid cell.

195. There is also the little SPARKING DYNAMO AND MAGNETO, which are successfully used in many instances for gas engine ignition. Also the HOT TUBE.

196. There are so many points to be considered in this connection that it would not be fair to our readers to attempt to recommend either device above the other.

197. The ignition of a gas engine is a source of repair expense, no matter what source of electrical energy is used. Each arrangement has its disadvantages as well as its advantages. Economy, safety, at-

tention, convenience, cleanliness and reliability are the principle points to be considered.

198. The location and surroundings would probably determine my prefence. For instance, in the natural gas fields, where fuel is very cheap, I might decide on the hot tube ignition. Away off in the country where gasoline is the fuel and somewhat expensive I think a good dry cell battery would about meet the conditions. In the city where electricians are to be easily had when repairs are necessary the magneto or dynamo would, in my opinion, more nearly meet the requirements. The fluid cell is a sort of mother over all the others because it has been most generally employed in this country.

199. By the foregoing statement I do not mean to convey the idea that the fluid battery is more desirable than the others, only that it holds sort of a pre-empted claim now by reason of having been more generally used in the past.

200. I wish to make this assertion, that I can operate a gas engine successfully on either method of ignition anywhere, with economy possibly in favor of the dynamo if it is well constructed, but it may require more attention than the battery.

201. Either method, as before stated, has its advantages and disadvantages, and my advice to my readers is, that, whichever method you may be called

upon to use ,inform yourselves as quickly as possible on its disadvantages, and overcome them as nearly as possible.

202. I doubt not that the reader now thinks we have reached the point of starting the engine and is anxious "to see the wheels go round." But you will be more highly delighted in seeing them turn if you have first learned and attended to all the preliminaries. A good engineer never omits one of them; a bungler omits all of them.

203. These PRELIMINARIES are ARRANGEMENT, CLEANLINESS, WATER, OILING. Under arrangement comes the old adage, "A place for everything and everything in its place." The condition of the engine room portrays the character of the person in charge. A BAD RUNNING ENGINE, waste, wrenches, oil cans, litter in general scattered promiscuously over the floor of the engine room indicates a bungler not worthy the name of engineer.

204. An engine room with plenty of light, everything in apple-pie order, trim, clean and neat, means a nice runnning engine and a For-Sure Engineer.

205. Cleanliness contribues so much to the successful running of an engine that it cannot be TOO FIRMLY IMPRESSED on the mind. The companion of cleanliness is PLENTY OF LIGHT. Darkness and dirt go hand in hand.

206. Therefore with plenty of light in

the engine room it should be cleaned up and made as free as possible from dust and grit. After this the engine should be thoroughly cleaned all over, giving special attention to the Cog or Spiral Gears, governor, valve stems and valve cams. On account of dampness these working parts often become rusted in shipment and will not work properly until cleaned.

207. The water supply should be noticed to see if the tank is full to the overflow pipe, and in cold weather to see that none of the pipes are frozen up.

208. Then comes the oiling of the engine, which should be done in a thorough manner. Use ordinary machine oil on the various parts of the engine, EXCEPT IN THE CYLINDER. A special cylinder oil for gas engines only should be used.

209. Steam cylinder oil is not well adapted to a gas engine cylinder. A light thin cylinder oil, of a high fire test, is best adapted to use in the gas engine cylinder. It is usually much less expensive than heavy steam cylinder oil. Some gas engines are fitted at the wrist and journal boxes with grease cups, which should be filled with shafting or graphite grease and set so as to feed automatically.

210. When oil and grease cups are filled and all bearing parts that are liable to wear are oiled, the VALVE STEMS should be tried by lifting the valve

pallet from its seat a number of times after squirting some kerosene oil on the stem from a squirt can. These stems shou l be frequently examined and kerosene oil used only occasionally to keep them clean. Never use ordinary lubricating oil on them. The heat simply burns it and leaves a gumy deposit on the stem which interferes with the free movement of the valve.

211. STARTING IS NEXT IN ORDER. Practically all the smaller sized engines from two to ten horse power are started, as it is called, by hand. Some engine builders fit their engines over ten H. P. with a starter, which in some instances is more alluring to the purchaser than practical.

212. The first act in starting a gas engine by hand after switching in the battery current is to get a charge of gas and air, properly mixed, into the cylinder. This is accomplished by opening the gas or gasoline valve slightly so as to admit a small portion of the fuel as the receiving valves are opened when the fly wheels are turned over at a rapid rate.

213. Where gasoline is the fuel some manufacturers supply a starting cup, which fits on the mouth of the air or receiving pipe, and instead of opening the needle valve a small portion of gasoline (about a tablesponful) is put into the cup and placed on the mouth of the receiving pipe, and when the wheels are turned over the air rushes through the

gasoline in the cup, and the engine receives its first two or three impulses from the fuel in the cup, which gives it sufficient momentum to keep it going until the cup can be taken off and the gasoline from the needle or throttle valve is admitted, from which the engine gathers full speed.

214. You have no doubt heard persons say that they have to turn their engine for half an hour or more before they can get it going. If such persons knew that they are simply proclaiming their astounding lack of judgment they would not be telling it.

215. But, you say, if the engine fails to ignite its first, its second and its third charges, is it not policy to keep turning the wheel until it does ignite? If neither of the first three or four charges are ignited the cause of non-ignition will not be removed by turning the wheel and will probably be getting worse the longer you turn, and the fellow who does not know what else to do but turn ought to be compelled to turn vigorously until his tongue hangs out out of his mouth to the length of a full grown lead pencil. If such exertion doesn't start his thinker his case is probably hopeless.

216. If an engine doesn't ignite its first charges there is a cause for it, and no amount of turning will locate it, but a little common sense thinking will not only locate but remove the cause, and

the engine will do its own turning after the first two or four revolutions.

217. You would like to know why I say four. If common sense will do it, after allowing one revolution to admit the charge and gain the momentum, why not always start or ignite the second revolution? There is no such thing as absolute perfection even in common sense, but four, and occasionally six, revolutions for ignition may come within the bounds of practical perfection. However, I know of many gas engine operators who seldom turn the wheel more than the second time.

218. The engineer who knows his lesson well will know that there are many improper adjustments and irregularities that will cause failure of ignition on the first turn and will avoid them, and as they are of sufficient importance to require special attention we had better finish starting the engine in a normal condition and take this subject up later.

219. TURNING OVER COMPRESSION POINT. Nearly all engines are provided either with a relief valve or a shifting cam or lever, which makes a relief out of the exhaust valve. By means of these valves only the latter part of the compression stroke serves the purpose, in as much as the former part is relieved by an open valve. This allows sufficient compression to start with and makes resistance at this point barely perceptible in turning.

220. Others prefer to inhale a charge by a one-half turn of the wheel on the outward movement of the piston, then by disengaging the receiving valve lever from its cam a rapid backward movement of the wheel, and the piston compresses the charge and fires it from the tube ignitor, or the electric spark, by snapping the sparker quickly by hand while on compression.

221. The ignition of this charge drives the piston rapidly forward and gives the wheels sufficient momentum to carry several revolutions and catch the next charge.

222. Where a relief lever cam or valve is used the impulses are necessarily light while the valve is relieving the compression ,and the lever should be shifted and the valve closed as soon as the wheels have gathered sufficient momentum to carry over the full compression.

223. Instead of having the engine inhale its own charge by turning the wheel, some builders fit their engines with a small HAND AIR PUMP for the purpose of pumping the first charge into the cylinder. The air thus pumped passes through a receptacle containing gasoline, which serevs as a carburettor and charges the air sufficiently with gasoline to make it explosive. After the cylinder receives its charge from the pump the valve in the pump connection is closed, and the wheels backed up on compres-

sion, the charge is fired as before described, or by means of a match ignitor.

224. THE MATCH IGNITOR consists of a little tube containing a plunger and closed solidly at one end except two side notches near the end, and fitted at the other end with a packing gland through which the stem of the plunger extends to the outside. The end of this stem is fitted with a button.

225. The tube being threaded is screwed into a port into the cylinder walls and the notched end of it extends into the combustion chamber.

226. The head of the match is placed under the plunger and the button tapped with the hand, dashing the plunger down onto the match head, and the resulting flash ignites the first charge in the cylinder through the side notches in the tube.

227. A somewhat different device is used by some engines, but the principal is the same exactly.

228. You of course understand that this is used only for igniting the initial charge and consequently is only a starter.

229. The compressed air starter consists of a tank with a capacity two or three times that of the engine cylinder, and an air pump, which is driven usually by a belt from the line shaft, filling the tank with air to a pressure of from sixty to one hundred pounds, which is indicated by a pressure guage on the tank. The

tank is filled when the engine is running and held ready for the next start.

230. The pipe leading from the tank to the compression chamber in the cylinder is fitted with a handle valve that can be manipulated quickly.

231, When ready to start the engine is set with the piston back in the cylinder, the crank shaft about two inches above the inner center, and the valve closed. Of course the cylinder valves must remain closed on the first outward movement of the piston.

232. When the engine is set all ready to receive the charge from the tank and the battery current switched on ready for ignition, the valve between the engine and tank is quickly opened, throwing the pressure from the tank into the cylinder, which drives the piston forward. By closing the valve at the end of the piston stroke the act may be repeated at the second revolution following, giving impulse sufficient to catch a charge of gas and air with the ignitor on the third or fourth revolution.

233. This compressed air Starter is only used on engines above 15 H. P.

234. The same arrangement with a smaller tank and much less pressure can be used successfully by fitting a little cup, for the purpose of holding gasoline, into the pipe between the tank and engine, and as the air rushes from the tank into the cylinder it is charged with gasoline

and may be exploded by the Electric Spark or igniting mechanism.

235. The Compressed Air method seems the most practical for starting larger sized engines. While it makes the first cost of an engine higher, it is well worth its price to the purchaser.

236. It is supposed, of course, that an engine will run all right after it is once started, but it doesn't always do it. You should run an engine for at least a half hour without a load, when starting it the first time. This will give you an opportunity to get familiar with it, running empty.

237. If it is receiving its fuel in the proper proportions and the ignitor is working all right it will go right up to its normal speed within a few seconds after starting, and if it has a hit and miss governor it will cut out or miss three or four charges to every one it takes.

238. If it runs along this way at a "merry clip," taking only one charge in three or four and firing every charge it takes, you can rest assured that it is ready for work.

239. But if there is a popping or back firing into the receiving pipe it may need MORE FUEL or the receiving valve may not close properly, or the ignitor may not be set in proper time, or is otherwise out of adjustment.

240. TOO MUCH FUEL is indicated when there is smoke issuing from the

exhaust pipe and when the charges that are taken are not all ignited.

241. You can shut down a gas engine by feeding too much fuel just as readily as by not giving it enough. A little judgment here will tell any one when he is feeding the fuel properly.

242. It is a mistake to turn on MORE FUEL WHEN MORE POWER is wanted.. When an engine is pulling nearly its full load it is cutting out only about one charge in five or six. By listening closely to the sounds made by the engine and at the same time noticing it closely you will be able to judge whether it is running properly or whether it lacks the energy it should develop.

243. The COMPRESSION has very much to do with the power developed. For instance, if the valves are not seating properly or the piston rings are poorly fitted so as to allow the escape of part of the charge compressed and also a part of the impulsive force the engine will develop but very little more power than to keep itself in motion.

244. About thirty per cent. of the entire cylinder volume should constitute COMPRESSION CHAMBER. If a high compression pressure is desired twenty-five or even twenty per cent. is allowable.

254. You understand that it is necessary in figuring up cylinder volume to consider all the valve and port space which is practically a part of the cylinder. The

principal objection to a high compression is the danger of premature firing of charges under a full load, which is due to auto-ignition, a result of high compression pressure.

246. High compression is sometimes, but by no means always, the cause of premature firing. In fact, I might say that it is one of the rare causes, because very high compression engines are rare.

247. PREMATURE IGNITION may be caused by one thing in one engine and an entirely different thing in another. Probably the most common cause is some projecting point of iron in the combustion chamber that becomes red hot, which serves to ignite the charge, similar to a heated tube.

248. An improperly proportioned mixture, resulting in a slow combustion, may be so slow as to be still burning when the next charge is admitted, and then the new charge will be ignited just as it is entering the cylinder and fire back through the receiving pipe.

249. Little chunks of burnt carbon, accumulating from the burnt cylinder oil, in the combustion chamber, may constantly remain heated to the ignition point and ignite the charges prematurely.

250. Points of carbon deposited on any projection in the combustion chamber will do the same thing. It is therefore necessary to occasionally clean out the gas engine cylinder.

251. A CONSTRICTED EXHAUST passage may retain a higher degree of heat in the cylinder and thereby assist in maintaining an igniting heat on some projecting point in the combustion chamber. But there is a power significance to valves and their passage that should determine their size and areas.

252. Constricted valve passages are a decided hindrance to the development of power. The valve proportions should always be carefully figured from piston speed and cylinder area.

253. The receiving valve area should be such as to give the ingoing gases a speed of from 95 to 110 feet per second. The exhaust gases should leave the cylinder at from seventy-five to eighty-five feet per second at atmospheric pressure.

254. The exhaust should be larger than the inlet valve, because at the moment of opening the exhaust valve there is a pressure of from twenty-five to thirty-five pounds in the cylinder to relieve, and consequently the rush of exhaust gases at the moment of release is away above 110 per second, and if it had to pass through a constructed valve passage it would maintain the initial high speed throughout the exhaust stroke of the piston, resulting in a piston pressure on the entire exhaust stroke.

255. The point, then, is to figure the exhaust passage of such proportions as to relieve the exhaust gases at an average

speed throughout the exhaust stroke of not over 100 feet per second. I regret to say that it is common practice among manufacturers in this country to make the valves and their passages too small.

256. In a number of engines I had the privilege to examine, manufactured by different concerns, I found either a constricted cylinder port or valve area, or both.

257. It is the height of folly to have a good big cylinder port, and choke the passage with a "measly" little valve, or vice versa.

The passage should be of uniform area and of ample capacity from the cylinder port to the end of the pipe.

258. The manufacturer who will not figure these valve areas carefully of sufficient capacity is cheating his engine out of a reputation and his customer out of power.

259. TIMING THE VALVES.—The movement of the valves should be timed to give the proper results. This is an important point for all gas engine operators to remember. The valve cams on a four-cycle engine are usually driven by the two to one gear fitted onto the crank shaft, and if for any reason the gears are taken apart and put together, even if only one cog out of place, it will throw the valves and sparking arrangement out of time.

260. Manufacturers usually mark A

TOOTH or COG on one gear and its corresponding groove on the other with the same mark. These marked points should always meet, and the engine is then properly timed. You can, of course, easily understand how a cam and cam roller may become worn by constant use so as to throw the valve out of time. A worn condition means lost motion, which results in opening the valve too late and closing it too early.

261. You can test an engine to know if it is properly timed by turning the wheels over slowly and noticing at what point the valves open and close and where the igniting points separate.

262. The RECEIVING VALVE should open at the beginning of the outward stroke and close at the end of the same stroke. The next inward stroke is the compression stroke, when all valves should be closed.

263. The SPARKER POINTS should separate and make a spark just before the end of the compression stroke is reached. This is done to allow for the instant of time between the making of the spark and the resulting combustion. The force of combustion does not come instantaneous with the making of the spark. Therefore the compression stroke will have ended before the force of combustion really begins, and the piston just starting on its outward stroke receives the full expansive force of combustion.

264. If the spark were made just at the end of the compression stroke actual ignition or expansion would not occur until the piston had traveled probably a fourth of its outward stroke. This delayed combustion could not be as effective as if occurring at the very beginning of the working stroke.

265. The EXHAUST VALVE should open when about three-fourths of the working stroke is completed, so as to relieve the cylinder to somthing near atmospheric pressure at the end of the stroke. The exhaust valve should then remain open for the entire exhaust stroke, and should close just as the receiving valve is again opening.

266. Again I think it proper to refer to the question of lubricating the valve stems of the gas engine. The work an exhaust valve is designed to do makes lubricating impracticable. The heat passing through the exhaust valve will quickly destroy the lubricating qualities of any oil, and therefore it makes it useless.

267. It is therefore the custom of gas engine builders to make no provision for valve lubrication. They can be operated successfully without oil. Before starting a new engine squirt some kerosene oil on the stem and see that it moves freely. A good grade of powdered graphite used on the valves and valve stems occasionally would tend to improve their working qualities.

268. All frictional parts should be regularly lubricated. But the wrist pin and cylinder need to be especially looked after. The oil cups supplying these parts should be noticed often during a day's run to make sure that the oil is supplied and properly distributed.

269. Insufficient lubrication of the cylinder is often indicated by a peculiar blowing, barking noise in the cylinder at each impulse. It is due usually to a dry piston allowing the force of combustion to pass the rings. It can often be overcome by adjusting the lubricator for a freer oil supply without stopping the engine.

270. After running a cylinder dry, at the first opportunity the piston should be taken out, and the rings, their seats and the entire piston thoroughly cleaned. At the same time the cylinder and combustion chamber should be examined with a lighted candle and cleaned from chunks of burnt lubricating oil and deposits of carbon in the form of soot. This is also a good time to clean the valves and valve ports as well as the igniting apparatus.

271. Before the piston is returned to the cylinder it should be lubricated with oil. A good engineer will seldom have this to do, because he will see to it that his cylinder is lubricated.

272. The wrist should run cool. If it does not it indicates that lubrication is at fault or that it is not properly adjusted.

273. A good engineer will not rest easy until he has located and removed the cause of a hot-running crank box.

274. FUEL CONSUMPTION of an engine is always a legitimate question, and one of grave importance to the purchaser as well as to the manufacturer.

275. Ordinarily about one and two-tenths pints (1 2-10) of gasoline or about fifteen feet of natural gas, or about twenty-two feet of artifical gas, per horse power per hour under full load, will cover the fuel consumption. That is, when the gases named are of standard quality and the water comes from the water jacket at a temperature of about 160 degrees Fahrenheit.

276. The temperature of the water in the chamber around the cylinder has very much to do with fuel consumption.

277. If water from a hydrant is forced around the cylinder so as to keep it cold, the heat from the explosions or combustion is cooled down so quickly by radiation that the expansive force is materially reduced, and consequently less power from the same charge.

278. The object of the water is not to keep the cylinder Cold, but simply Cool enough so as to prevent the lubricating oil from burning. The hotter the cylinder with effective lubrication the more power the engine will develop.

279. It should also be remembered that an engine is the most economical in fuel

consumption when working practically under a full load.

280. It is wrong to suppose that an engine taking fifteen feet of gas per horse power under a full load should take only seven and a half (7½) feet under half load. When running empty an engine may use from thirty to thirty-five per cent of its total fuel consumption under full load.

281. Speed has considerable influence over fuel consumption, especially in driving the engine empty. Take, for instance ,an engine of four horse power, run it empty at a speed of, say, 250 revolutions per minute and notice its fuel requirements at that speed ,then increase the speed to 500 revolutions per minute and you practically double the fuel consumption running the engine alone.

282. It is not always practical for a manufacturer to guarantee fuel consumption. I should say it is seldom, if ever, practical to do so without exacting from the purchaser conditions and requirements that would make him feel that the engine itself is not practical. In general the average fuel consumption may easily be kept down to the quantity above mentioned, although many conditions may arise to change the amount required.

283. It is not always the fault of the manufacturer if the fuel consumption overruns the estimate. It is more often the fault of the engineer in my opinion,

I should advise for economical fuel consumption:

First—To keep jacket water at 160 degrees Fahrenheit.

Second—To run engine at a medium speed.

Third—To use a good standard fuel.

Fourth—To see that every charge the engine takes is exploded, for which a proper mixture and a good spark or hot tube are necessary.

Fifth—The admission valve should close properly between charges, so as not to allow a continuous flow of fuel into the engine.

Sixth—Never throttle the fuel so closely that the engine cannot get a full charge every time it needs it.

Seventh—Be sure that there is no leak in the supply or overflow pipes where fuel can escape.

Eighth—When gasoline is used be sure that there is no leak in the supply tank.

With these precautions one will use only so much as will be required by the engine to handle its load.

PART IV.

Gas Engine Troubles.

284. Following are five gas engine troubles that are most frequently met with:

Defective Ignition, Pounding in the Cylinder, Loss of Power, Back Firing and Obstinate Starting, although the last is very often intimately associated with the first.

285. DEFECTIVE IGNITION.—The symptoms, causes and remedies for defective ignition are: Difficult starting, thumping in the cylinder and an occasional terriffic report at the end of the exhaust pipe, Miss Firing, Premature Firing. It must not be taken for granted, however, that difficult starting is always due to defective ignition. But when an engine refuses to start after turning the wheels several times defective ignition may be suspected, and the igniting apparatus should be looked after.

286. If a tube ignitor is used and the charge is fired too early, throwing the wheels backward, the flame should be raised so as to heat the tube at a higher point. If the charge isn't fired at all, then the flame may be directed at a lower point on the tube. But in either event it is always best to have the tube quite hot (bright red hot) when starting. It can be cooled to a cherry red after the engine is running and yet fire its charges successfully. The port or passage between cylinder and tube must always be free and unobstructed. It sometimes clogs with burnt carbon. Sometimes the builder makes this port too small. Clean if it is obstructed. Enlarge it if necessary.

287. When the battery is used for ignition purposes the timing of the spark is always important. The terminals should separate just before the crank passes the inner center. The switch may be disconnected. Some of the wires may be loose on their binding posts. The terminals on the movable terminal shaft may be gummed up or corroded and needs cleaning. The battery may be nearly exhautsed and needs renewing. The current may be short circuited somewhere before reaching the engine.

288. SHORT CIRCUIT.—If the zinc plates or any one of them should be allowed to touch the carbon within the cell it will cause an internal short circuit. If one wire from the battery to the engine should have its insulation broken at a point where it touches some pipe or iron that in any way communicates with the other wire, there is an external short circuit. Broken insulation may short circuit the spark coil.

289. The Battery current is tested by disconnecting the end of one of the terminal wires and touching with it the binding post to which the other wire is attached. If it does not make a bright spark each time the wire is snapped or slipped off the binding post you can be sure that some of the causes above named are to be found, and as soon as the cause is removed the spark will show up all right.

290. If there is a good spark on the ends of the wires and a weak one or none at all at the point of contact of the terminals it indicates that the trouble is in the sparking mechanism on the engine. This mechanism is either corroded, gumy or short circuited. It should be thoroughly cleaned and closely examined for a short circuit.

291. The SPARKER INSULATION can easily be tested by disconnecting the wire NOT attached to the insulated terminal and snapping it off some of the bright parts of the engine, when the terminals ar eapart (the other wire being, of course, attached to the binding post on the insulated terminal), and if a spark is made it indicates that the insulation is broken and consequently a short circuit. If no spark is made the insulation is all right.

292. There should be nothing loose or no lost motion about the terminals or the mechanism operating them.

293. Either a good fluid or dry cell battery will furnish a good spark from two to six months, according to the amount of work done with the engine. If the engine is used continuously for ten hours each day the battery may need renewing any time after two or three months.

294. I have on several different occasions found engines that absolutely refused to start when the battery and all connections seemed to be in good condition, but went off and ran perfectly from the

first turn of the wheel after a new spark coil was placed in the circuit. The short circuit in the old coil was so deep down among the coils of wire that it could not be detected.

295. The character or appearance of the spark, and especially if of a scattering nature, should lead you to suspect a short circuited coil. An EFFECTIVE or GOOD igniting spark is a SINGLE BLUE-WHITE SPARK at the point of contact. But beware of a dozen little sparks flying out in all directions from the terminals. They will not ignite.

296. A battery may not be entirely exhausted when it fails to give an igniting spark. The fluid in the cell may have evaporated so that the carbon element is not sufficiently submerged. I have repeatedly revived fluid batteries that were apparently exhausted by simply filling into each cell pure rain water to within one-half inch of the lid of the cell.

297. An old battery that has not been used for a long time, and in which the elements seem good, may be treated this way, and afterwards short circuited for about three or five minutes.

298. In fact in renewing a battery or setting up a new one it is always good policy to short circuit it for from three to five minutes by bringing the ends of the terminal wires in contact with each other. This creates a healthy chemical action

within the cells, which is necessary to generate the electric current.

299. The current from a dynamo igniter is tested, while the dynamo is running at its rated speed, by taking a piece of wire about two feet long with the insulation stripped off both ends, and placing one end onto the binding post of the machine and snapping the other end off the other binding post. This will produce a faint spark if a current is generating, and by placing a spark coil in the circuit—that is, by taking two short wires as above described and connecting one end of each to a binding post on the coil and using the other ends to make and break the current on the dynamo binding posts, you get the full benefit of the current and can judge of the igniting qualities by the size and color of the spark.

300. The fields of a dynamo should not become overheated, but should remain cool. The bearings should be oiled properly, and the brushes and commutator should have regular attention. It should be kept absolutely clean.

301. Before leaving the subject of ignition I wish to emphasize the fact THAT A GAS ENGINE IS NOT RUNNING PROPERLY if every charge admitted by the governor is NOT FIRED or ignited. No one should allow his engine to run taking two, three or four charges in succession and only firing one of them with-

out immediately locating and removing the cause.

302. I recall a case of miss-firing and an occcasional terriffic report at the end of the exhaust pipe which was caused by the taper pin, which held the rocker arm to the movable stem, wearing loose and allowing lost motion at this point, which should have been rigid. A new and larger sized pin made out of a wire nail driven firmly into position completely overcame the trouble.

303. The lost motion made such an indefinite and uneven contact that only an occasional charge was ignited, which in turn ignited those previously forced through the cylinder, without ignition, into the exhaust drum and pipe, and the result was a terrific report at the end of the exhaust pipe, similar to the firing of a cannon. Every engineer should familiarize himself quickly with the natural sounds of his engine, and his ear will always be on the alert and detect any unnatural sound the instant it occurs.

304. I have been able correctly to say, "That engine is not firing all its charges," by listening to the exhaust reports half a mile across the country. The character of the sound of the exhaust reports as well as their number between intermissions will also tell you at a distance whether the engine has a light or a heavy load and whether it is overloaded.

305. The sense of hearing suspects and

decides whether there is trouble when the engine is running. The sense of sight locates and corrects it. The sense of smell will tell you whether fumes of burnt gas are passing the piston rings or leaky valves, and escaping into the engine room instead of outside through the exhaust pipe. The sense of touch tells you whether the journal boxes and other bearings are running cool. The sense of taste is about the only one of the five senses that we do not need to detect some trouble about an engine. In fact I have seen engines running so badly that I imagined I could taste it. The ear, however, may be considered the chief guide while the engine is in motion.

306. POUND IN CYLINDER.—The principal cause of pounding in the cylinder is pre-ignition of the charge. Pre-ignition, as has already been stated, is usually caused by some projecting point or carbon deposit in the igniting chamber, heated to the igniting point. A high compression of the charge may also contribute to pre-ignition.

307. Of course a knock or pound at the wrist or crosshead, due to lost motion of these points, must not be confounded with a pound in the cylinder. A loose fly wheel may also puzzle one at times, in as much as the jar or thump caused by it may sound like a thump in the cylinder.

308. I would test pre-ignition by throw-

ing off the igniting current or shutting off the tube igniter. If the engine continues to fire its own charges and runs along pounding away it is good evidence that the pound is due to pre-ignition. If, however, it ceases to fire the charges the instant the igniting current is cut off, pre-ignition caused by projecting points or carbon deposit may be excluded. But the hot point on the tube and time of the spark must not be overlooked. If, however, the pounding keeps up until the engine stops a tight piston is probably the cause of the trouble.

309. I have frequently shut off the current and gas from a pounding engine and noticed it stop dead sooner than you should expect it to. And when endeavoring to turn the fly wheel over by hand the piston stuck tight in the cylinder. A few minutes' rest, allowing it to cool, will loosen up the piston.

310. If a piston is made to fit the cylinder too snugly it will usually result in pounding in the cylinder when the engine is put under a heavy load. The cylinder thump or pound is a deep, heavy pound, while a loose fly wheel or loose wrist bearing is indicated by a thump more of the clicking variety. Then there is a BARKING NOISE, due to the escape of the EXPLOSIVE FORCE PAST THE CYLINDER RINGS. This is easily distinguished from either of the others.

311. The object is to locate the cause of

the thump or pound wherever it is and remove it. Any one who is able to find the cause of the trouble will no doubt find a remedy that will soon correct the difficulty.

312. If pre-ignition is the cause the pounding will cease as soon as the combustion chamber is cleared of the carbon deposit, the projecting point causing the firing is removed ,the time of the spark set later or the flame on the tube elevated.

313. If the cylinder rings allow the explosion to pass, making a barking noise they should be either replaced by new ones that are well fit into their grooves and also to the cylinder ,or the old ones should be dressed with a fine file, on their surface, so as to bear at all points of their circumference on the cylinder wall.

314. If the knock is in the crosshead it may be relieved by tightening up the bearing. Care must be exercised lest you get it too tight, which will make it knock more than ever.

315. If the knock is in the wrist it is best to take it up little at a time. A loose fly wheel must never be allowed to run until it is thoroughly keyed to the shaft and perfectly tightened.

316. I might add that pre-ignition is liable to cause undue expansion of the piston and cause it to stick in the cylinder. In such instances it is not proper to dress the piston until pre-ignition is

corrected. A piston that sticks when pre-ignition occurs may run all right when pre-ignition ceases. The cause of this undue expansion of the piston from pre-ignition is the extreme heat the piston encounters while firing the charge before the end of the compression stroke.

317. Don't conclude that a THUMP, POUND or THUD about an engine is always due to some trouble in the cylinder. Look for such causes as the following:

First—Pre-ignition (premature firing).

Second—Badly worn or broken piston rings.

Third—The explosive force escaping by the piston.

Fourth—Improper seating of a valve.

Fifth—A badly worn piston.

Sixth—Piston striking some projecting point or foreign body in the combustion chamber.

Seventh—A loose crosshead bearing.

Eighth—A loose crank or wrist bearing.

Ninth—A loose nut or journal box cap.

Tenth—A fly wheel or pulley loose on the shaft.

Elventh—A broken spoke, hub or rim in fly wheel or pulley.

Twelfth—Lost motion in any bearing, gear or governor.

319. The sound produced by pre-ignition

may be described as a DEEP, HEAVY POUND.

320. A loose fly wheel causes a thump, or sometimes a sort of metallic grating sound.

321. A loose crosshead or crank bearing makes a thud or knock.

322. A click will usually direct attention to a loose nut or cracked rim, spoke or hub, on pulley or fly wheel.

323. LOSS OF POWER.—The loss of power is due principally to leaky valves, miss-firing and choked inlet or exhaust passage. A bent exhaust lever or lost motion by reason of a worn condition of the cam and cam wheel or roller, which will prevent a full and free opening of the valve will cause a constricted passage.

324. Under leaky valves may be considered leaky piston rings, or any point about the cylinder where part of the explosive force escapes while it is driving the piston on its working stroke.

325. The valves if leaking should be taken out and thoroughly cleaned and ground into their seats with powdered emery and lubricating oil.

326. If the cylinder rings are so worn as to become leaky or allow escape of the explosive force, they must be replaced by new ones, and it is sometimes necesssary to put the piston into a lathe and true up the grooves to fit the new rings. If any point of leak is discovered it should

be properly packed or plugged at once.

327. MIS-FIRING means failing to fire each charge the engine takes, and the remedy has already been given. It consists of examining the battery and all its connections to the terminals, and determining whether the battery is exhausted or not, whether there are broken connections, whether the terminals or other points need cleaning or attention otherwise. If tube ignition is used, whether the tube is hot enough, whether it is heated too high up, wheter by corrosion or other means the passage from the cylinder to the inside of the tube is closed up. Also determine whether fuel is fed to the engine in proper quantities. May not be getting enough at a charge or even too much.

328. CHOKED INLET PASSAGE.—Nearly all gas engines are fitted with some kind of a mixing device in the shape of a Perforated plate, wire screen, etc. These mixing devices may become occluded with dust, soot waste, cloth or paper drawn into the inlet pipe. The strangest of all is that they sometimes become occluded with ice. The rapid evaporization of the gasoline while passing through the mixer may freeze any watery elements in the air and gasoline deposit it in the shape of ice in the mixer until it becomes completely occluded.

329. The engine may start off and pull

its load easily and as the ice is gradually deposited in the mixer the engine shows less and less power, until it finally stops. A wait of five or ten minutes will melt the ice sufficiently to allow another short run. Such actions or symptoms should lead one to suspect a frozen up mixer and to look for the cause.

330. In a number of such instances that came under my notice I have simply removed the mixer screen entirely and ran the engine without it, which overcame the trouble entirely.

331. Whatever the cause of a choked inlet, see that the cause is removed.

332. BACK-FIRING. — The explosive force coming out of the mouth of the receiving pipe is callled Back-firing. Its principal cause is a delayed combustion of the previous charge. When the air entering the cylinder does not receive a sufficient charge of gas or gasoline it makes a slow burning mixture. This mixture may be so slow in combustion that it continues to burn not only on the working stroke but also on the exhaust stroke of the piston, and there still remains enough flame in the cylinder to fire the fresh incoming charge, which of course escapes back through the receiving pipe, the receiving valve being open.

333. Any projecting point of iron in the igniting chamber or chunks of carbon deposited in the cylinder may become

heated to a red heat and serve to ignite the incoming charges.

334. Feeding the fuel a little more freely will remedy the back-firing if caused by a weak mixture. If this does not control it chunks of carbon or projecting points of iron or carbon should be looked for and removed if found.

335. OBSTINATE STARTING.—Defective ignition is one of the principal causes, and you have already been told the remedy. But SLOW VAPORIZATION of gasoline in cold weather, OVERCHARGING THE INGOING AIR with gas or gasoline when turning an engine over by hand, and WATER IN THE CYLINDER when trying to start are causes as frequently met with as Defective Ignition.

336. You can facilitate vaporization of gasoline in cold weather for starting purposes by previously heating some point of the air inlet pipe, which serves to warm the air as it enters, which in turn vaporizes the gasoline better than cold air.

337. A bottle of gasoline heated by holding it in hot water may be used for starting. The heated gasoline vaporizes easier.

338. To avoid over-charging the ingoing air when turning the wheels over slowly in starting, a starting cup may be used on mouth of receiving pipe instead of turning on gasoline by the needle valve

valve very slightly and gradually in- in a gasoline engine, and by opening the creasing the opening until the proper starting point is found, and the valve set at that point, will usually start a gas engine.

339. If WATER is found in the cylinder it must be removed and the leak stopped before a start is made. Sometimes a leak is so slight that it will not affect the running of the engine after it is started, but will leak enough while the engine is idle to prevent starting.

340. Therefore it is always well to drain the water jacket entirely before stopping the engine, and to start the engine before turning the water on again. Forming a habit of thus draining the water off before stopping the engine will serve an excellent purpose both in a leaky cylinder and in cold weather.

341. GROUND JOINTS that become leaky should be reground with flour of emery and oil, and wiped perfectly clean after sufficiently ground.

342. LEAKY VALVE STEMS are remedied by reaming out the bearing and putting in a bushing or a larger stem. The stem, of course, must be in line with the bearing centers of the valve seat.

344. IF IGNITION GRADUALLY FAILS make the tube hotter. Renew battery or have magneto or generator put in order by an electrician.

345. WEAK EXPLOSIONS, when en-

gine is starting, hardly strong enough to drive engine up to speed, indicates leaky valves.

346. IF SPEED GETS LOWER AND ENGINE FINALLY STOPS, suspect:

First—Irregular ignition; charges not all fired.

Second—Overheated cylinder or piston.

Third—Hot journal or wrist box.

Fourth—Overload on engine.

Fifth—Fuel supply exhausted.

Sixth—Exhaust or receiving valve leaking.

REMEDIES—

First—Repair broken wire connections, clean electrodes or igniting mechanism, repair insulation, renew battery, attend to magneto or sparking dynamo. Heat igniting tube to a higher degree.

Second—Increase supply of cold water and lubricating oil.

Third—Stop engine, examine hot box, if cut any, dress all rough places, and wipe out all filings or cuttings, readjust boxes to bearings carefully, lubricate well, start engine and keep a close watch on it for several days. If it shows any tendency to heat examine again and readjust.

Fouth—Reduce load on engine.

Fifth—Replenish fuel supply.

Sixth—Grind the valve that leaks to a good seat with emery flour and oil. Leaky valves and piston rings can be

tested by turning the engine wheels over till the piston goes on its compression stroke. If the valves and piston hold, the compression of air causes the piston to rebound. If they leak you can turn the wheel on over the compression stroke.

347. SMOKE at the end of the exhaust pipe means an over supply of fuel or a surplus of lubricating oil in the cylinder.

348. Set needle valve closer so as to feed less gasoline or gas. If this does not stop the smoke feed less lubricating oil into the cylinder.

349. SMOKE at open end of cylinder indicates that there is either a sand hole in the piston, leaky rings, or that the lubricating oil in the cylinder is decomposed by the heat.

350. Piston taken out and filled full of water will test it for a sand hole or other leak.

351. When piston is out examine rings if broken or worn out, or show by wearing at only one or two places in their circumference that they do not fit the cylinder, replace them with new ones snugly fitted into the piston grooves, as well as turned to fit the cylinder. If lubricating oil is burning increase supply of cold water.

PART V.

General Information.

352. BOUND BOXES.—When either the crosshead or wrist boxes become worn so that they shoulder tightly after all the liners are taken out, without correcting the lost motion or knock, their shoulders must be dressed either in a shaper by a machinist or filed true so that they can be set snugly to the pin they inclose and yet do not shoulder by from one-eight to one thirty-second of an inch.

353. LINERS.—This space between the box shoulders is usually filled in with two to four thin sheets of cardboard or wood fiber, called LINERS.

354. LINERS REMOVED.—As the boxes wear one liner at a time is removed and the nuts on the boxes set up a little closer.

355. SETTING A BOX.—Never set a box so close as to bind the pin or shaft it encloses. But set it close enough to prevent it knocking. Set the nuts, holding the box, up equally. Bring them up gradually together. Never set one up tight before bringing the other up. Don't be in a hurry. Don't set the boxes haphazard. Try the box after setting by turning the wheels over to see if it works tight and stiff. If so, it is too tight. Use judgment, othewise you will have a ruined box.

356. PINS WORN OUT OF TRUE

should be calipered and dressed round again with a file, or, better, put into a lathe and trued up with a tool and file. This refers principally to the CROSS-HEAD or PISTON PIN, and the CRANK or WRIST pin.

357. CUT BOXES.—Scrape the box or file it smooth with a fine file. Do the same with the pin by dressing off all the ridges and grooves.

358. HOT BOXES.—Watch all the bearings on your engine closely, especially while new. If any of them run hot stop your engine and examine carefully for the cause. If too tight, loosen it up a little; if it bears heavy on one side dress the point carefully where it shows the most wear; if a burr or high point on the shaft or pin dress it down smooth, but don't let the box run hot very long at a time.

359. RE-BABBITING A BOX.—If you have never seen a box rebabbited you had better not undertake it until you have called in some one who has had experience to assist you. But if your judgment is good and you have sufficient confidence in your ability to do a thing properly you can do it alone. The principal things to be observed: Get the box perfectly level, clean out all the old babbit, have box perfectly dry, adjust shaft in perfect line with the cylinder and the other box or bearing and stay it thoroughly so it will not be jarred out of place while babbiting. Cut cardboard to fit around

the shaft and the ends of the box, and then paste the cardboard to the ends of the box by means of putty or clay, and then close up all the creases with it where babbit might run out. When all is ready to receive the metal, which should be hot enough to quickly char a small stick thrust into it, put a piece of rosin onto the metal and pour as steadily as possible into the box. Babbit only half of the box at a time.

360. PACKING.—The cylinder head and valve chambers are in many engines packed onto the cylinder. Probably the best "all-round" packing to use, and the most easily procured, is Asbestos sheeting or board. Some builders use a packing called RUBBER BESTOS. Asbestos will stand the heat better than any other packing known.

361. LIME DEPOSIT IN WATER CHAMBER.—Don't let water chamber become filled with lime deposit. Better clean it once a month by taking off Cylinder Head and scraping the jacket free from lime.

362. If you are called on to clean a jacket that is well filled with lime and difficult to remove by scraping, the Hot Oil process of removing the lime is, we think, the least injurious.

363. It is done as follows: Drain all the water from the jacket, plug the lower port into the jacket ,and through a short nipple of pipe in the upper port fill the water space with oil. Then run the engine

till the oil gets boiling hot. Then let it stand over night to cool. Heat it again to the boiling point next morning by running the engine. Then stop the engine drain off the oil and let the engine cool off. Then start your engine with water turned on, and run for several hours, and when cooled shut off water and thoroughly drain off all sediment.

364. A BURSTED WATER JACKET, THE RESULT OF FREEZING.—No matter how much is said or written in the way of caution about draining the cylinder jacket and water pipes, carelessness will prevail in some instances and a freeze up, bursting the cylinder jacket, will occur.

365. It is fortunate, however, that the cylinder itself is seldom injured by these freeze-ups. Usually only the outer casing bursts, and hence does not interfere with the successful running of the engine.

366. When the exhaust valve chamber is watered the same trouble will occur with it if it is not properly drained.

367. When a freeze-up occurs it results usually only in cracking the water casing and the remedy is to patch it and go ahead.

368. The patching is done as follows: Drain off all water, plug lower pipe connections, fill jacket with salamoniac solution (one pound to a gallon of water), let stand thirty minutes, drain and run engine five minutes to warm jacket. Stop

engine, put solution back into jacket and repeat the process three or four times. If the crack is not too large you will thus form a RUST JOINT that will never leak.

369. If this does not stop the leak take an iron plate, long enough to cover the crack, shape it to the cylinder, drill quarter inch holes along each edge about two inches apart, drill and thread holes into the cylinder wall to match, lay a piece of candle wick well saturated with white lead on the crack and bolt the plate tightly over it with one-quarter inch round head screws. When using this method it is best to chip a little crease along the crack to receive part of the wick.

370. HOW TO GRIND A VALVE.—As has already been stated, nearly all modern gas engines use valves of the poppet variety. When it is suspected that a valve needs grinding, strip the stem of its lock-nuts and spring, and remove the cap or plug over the valve pallet, lift it out and examine the seat.

371. If it does not show a good bright bearing all around it needs grinding, which is done as follows: Apply lubricating oil to the seat of the pallet, then sprinkle on some flour of emery and drop the pallet into its seat. The top of the valve is usually creased to receive a screwdriver bit.

372. With a brace and bit the pallet may

be turned round and round for a time and then back and forth in a semi-circle. Work it this way, alternating the movements, for some time. Occasionally lift the valve pallet slightly from its seat, let it drop back and repeat the grinding movements.

373. When the valve turns without any apparent grinding friction take it out, wipe it clean, examine the seat, apply more oil and emery, and put it through another course of grinding.

374. This process may have to be repeated a number of times, but don't get in too much of a hurry to get through.

375. Two hours spent industriously on a valve may prove to be well spent and time saved.

376. When a good bearing seat is secured wipe the valve pallet and stem, as well as the valve seat and sleeve, in which the stem works, entirely free from emery, oil and grit. Return the pallet to its seat, close up the valve and adjust the spring and lock-nuts to the stem ready for service.

377. In handling a gas engine the first thing to learn is "not to be afraid of it." There is nothing about it that will injure or hurt you unless you allow yourself to become careless.

378. Such incidents as getting arms, legs and clothes caught in the gears, shaft, governor or FLY WHEEL KEY, while

the engine is running, are results of pure carelessness.

379. It is the engineer's duty to caution others who may be looking at his engine of these dangers.

380. EXPLORING THE INTERIOR OF THE CYLINDER.—It is sometimes necessary to explore the interior of the gas engine cylinder with a lighted candle, for the purpose of locating some sharp projection, burnt carbon, crack or sand hole, etc. When doing this always remember that a CHARGE OF FUEL may remain in the cylinder, and whether the candle is inserted through one of the valve ports or the open end of the cylinder, be sure to keep YOUR FACE away from the opening.

381. The lighted candle will ignite the charge, and the flash through the open port may result in a seriously burnt face. The candle is usually put into the cylinder on the end of a long, sharp pointed wire or stick.

HORSE POWER EXPLAINED.

382. Every engine uses a certain per cent. of its total power to drive itself.

383. A. H. P.—ACTUAL HORSE POWER, means the power an engine has to spare for driving other machinery after driving itself.

384. I. H. P.—INDICATED HORSE POWER, is A. H. P. plus the power an engine requires to drive itself.

385. TOTAL POWER of an engine is the same as its I. H. P.. B. H. P., BRAKE HORSE POWER, same as A. H. P.

386. If an engine develops on Brake Test, seven Brake Horse Power, or Actual Horse Power, and it takes 3 H. P. to drive itself, it is therefore properly called a TEN INDICATED and SEVEN ACTUAL or Brake Horse Power.

387. INDICATED HORSE POWER is determined by an instrument called an INDICATOR attached to the compression chamber of the cylinder, which is capable of indicating the pressure behind the piston by tracings on a card. The power is figured from the area of this tracing.

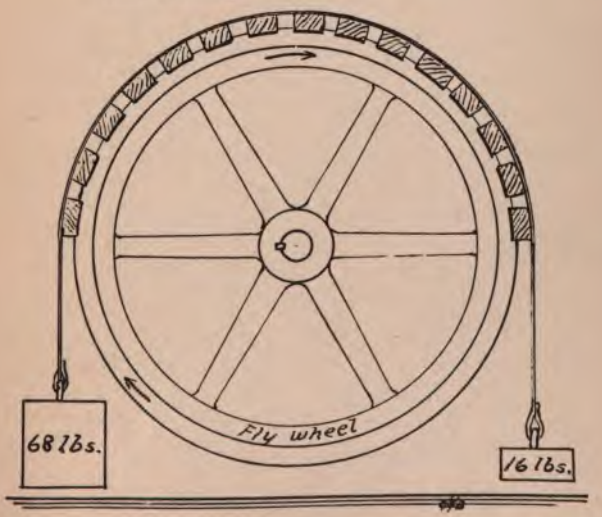

388. BRAKE TEST.—A piece of belt with linwood cleats fastened to it with wood screws, as per the above illustration, will serve to make an excellent arrangement for testing, brake or actual horse power.

389. On each end of this brake a paint bucket with bail or handle hung onto hooks fastened onto the ends will serve to hold small stones or chunks of iron with which to weigh the brake and cause sufficient friction.

390. This weight is applied until the engine is pulling all it will pull, without materially reducing the speed, and the weights on each side balance or hang clear of the floor.

391. The engine is then left running under its load for from ten to thirty minutes, during which time the speed is counted a number of times, to determine whether the engine holds the same speed.

392. When you have maintained the same speed for some time the test may be concluded by stopping the engine.

393. The weights on each end are then weighed and the difference in pounds is the number of pounds pulled by the engine.

394. By multiplying the CIRCUMFERENCE OF THE WHEEL IN FEET by the number of pounds pulled by the number of revolutions per minute, and dividing this product by 33,000 the result will show the Actual or Brake Horse Power of the engine.

395. EXAMPLE.—Diameter fly wheel shown in above cut thirty inches, or two and ahalf feet. 2½x3.1416 equals Cir. 7.85 ft.

Cir. Rev. Pounds.
7.85 ft. x 300 x 52 equals 37-10 H. P.

33000.

396. A power capable of raising 33,000 pounds one foot high, in one minute, equals one horse power.

TO START A GAS ENGINE.

397. Don't get excited. Go slow. Be sure you are right, then proceed as follows:

First—Clean the engine and all wearing parts thoroughly.

Second—Oil every point where there is any friction, EXCEPT VALVE STEMS and SPARKER SHAFT.

Third—If there is a relief or starting lever on the engine set it so as to relieve the compression. A Pet-Cock is sometimes used for this purpose instead of a lever. It should be open.

Fourth—Switch in Battery current. If tube igniter is used the flame against the tube should be started first thing. While the tube is heating oil up, etc.

Fifth—When hot enough open the throttle valve slightly so as to admit a light charge of fuel when the engine is turned over. REMEMBER you are more

liable to give the engine too much fuel instarting than not enough.

Sixth—Turn the fly wheels of the engine rapidly forward till it gets an impulse. Three or four revolutions should be enough.

After the engine has had three or four impulses and gained some speed throw out relief lever or close relief Pet-Cock.

Eighth—Start oil from lubricating cup on cylinder. Twenty drops per minute while engine is new. Less will do later on.

Ninth—Let water into jacket chamber from water supply.

398. TO STOP A GAS ENGINE.

First—Shut off water supply.

Second—DRAIN CYLINDER ALWAYS. TAKE NO CHANCES OF A FREEZE-UP, if you want to avoid trouble.

Third—Close cylinder oiler.

Fourth—Shut off gas or gasoline.

Fifth—Switch out the Battery Current.

Sixth—Wipe engine clean and see that it is in good shape for its next run.

399. While cleaning the engine after each day's run notice all the points of adjustment that are liable to need attention and see that all nuts, bolts and cap screws are tight or properly set.

400. Notice also the condition of the wrist, journal and other bearings. If any

of them are hot, locate the cause of the heating and if possible remove it before starting the engine again for work.

401. Before leaving the engine for the night see to it that the gas or gasoline is shut off and properly confined in the tank or pipes, that the battery current is switched out and that everything is in apple-pie order for the next run.

402. The Illustration on the opposite page is intended, in a general way, to show the mannner of connecting up the water, exhaust pipe and battery to the engine.

32764B

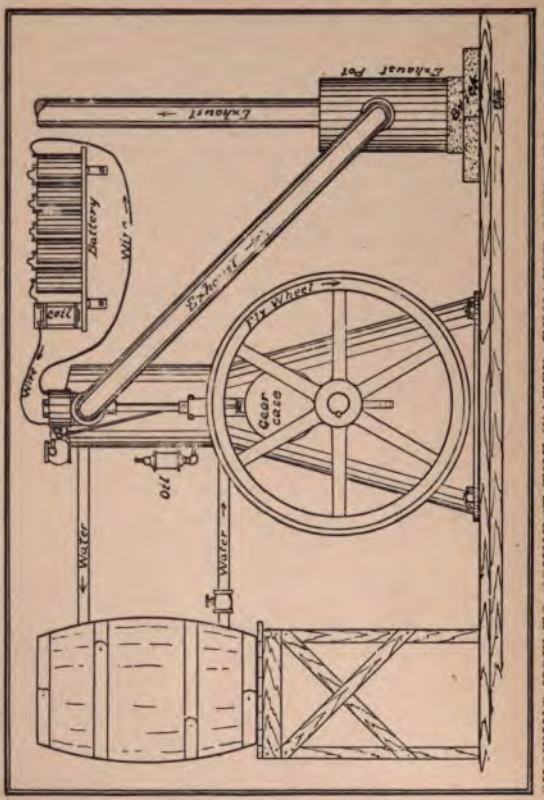

SHOWING HOW TO CONNECT THE WATER, EXHAUST PIPE AND BATTERY.

403. You will notice the bottom of the cooling tank sets about on a level with the inlet to the engine. I think this is a very important point to remember. It is better to have as few obstructions as possible in the water connections, where

a natural circulation is expected. Therefore the cooling tank should be so placed that the water through the lower pipe to the engine will flow at least on a level and not upward. There are no objections to placing the tank above the engine.

404. It is also well to observe that the lower pipe is connected a few inches above the bottom into the side of the tank, thus arranging a space below the pipe outlet to collect any sediment the water may contain, which would otherwise be carried into the cooling chamber of the cylinder, and tend to obstruct it.

405. The bottom of the cooling tank should be provided with a drain cook or plug, through which the tank may occasionallly be drained of all sendiment and thoroughly cleaned.

406. The cooling tank, exhaust drum and battery can of course be placed and connected to suit the location of the engine. They do not need to occupy the positions in relation to the engine as shown in the cut.

407. Place them where they are most convenient, connecting up the water and exhaust with as few "L's" and turns as possible.

408. The pump and gravity feed system for supplying gasoline to the engine have been fully described, as also the the method of piping up the gas. See index.

409. GASOLINE, BENZINE, NAPTHA

and the kindred Hydro-carbons are products of crude mineral oil.

410. They are separated from the CRUDE OIL by a process of distillation. The process is very similar to that of generating steam from water.

411. By the application of heat, water raised to a temperature of 212 degrees Fahrenheit changes from a liquid to a gaseous state, called steam. This conversion is only temporary. If steam is confined and cooled to a certain point it will quickly return to its liquid state, water, by the process known as condensation.

412. CRUDE MINERAL OIL subjected to heat will give off in the form of vapor such products as Gasoline, Benzine, Naptha, etc. The degrees of heat at which these products are separated are comparatively low. Various degrees of heat will separate the distinct products. As a means of illustration, we will say that crude oil raised to a temperature of 110 degrees gives off vapor which when cooled will liquify into what is known as naptha; benzine at 125 degrees, and gasoline at 140 degrees. These degrees of temperature are not authentic—simply used to illustrate.

413. After these lighter products are separated there yet remains the thick, oily liquid from which the various lubricating oils are prepared.

414. Praffine oil is one of the principal

products of crude oil, and the oily sediment which frequently accumulates in the botttom of the tank or can in which gasoline is confined is PARAFFINE OIL, which distills over in small quantity with the vapor of gasoline.

415. This oil might be finally separated from the gasoline by reconverting it into vapor several times and carrying it as such into a clean retort each time.

416. It should be remembered that gasoline that is is practically free from paraffine can easily be adulterated by putting it into unclean containers. For instance, we take chemically pure gasoline and put it into a wooden barrel or tank, that previously contained oil, which has not been cleaned, it is easy to understand how the pentrating qualities of gasoline acting on the oil soaked staves will extract the oil particles and deposit them on the bottom of the vessel because of their lower specific gravity. In the same way other sediments than oil may get mixed with gasoline.

417. The comparatively low degree of heat necessary to produce gasoline from oil makes it a fluid that is very volatile and easily vaporized in our warm summer temperature and therefore difficult to confine.

418. The best kind of a tank to use in confining gasoline is made of well soldered, galvanized iron, fitted with a safety valve, which will allow escape of

any gas that may accumulate to a certain pressure within the tank during warm weather.

419. A tank containing gasoline should never be so placed as to be exposed to the direct rays of the sun. This is done with many gasoline engine supply tanks and the result is an enormous waste of gasoline by direct vaperization, which loss is generally attributed to over consumption by the engine, very much to the detriment of its reputation.

420 The object of burying a gasoline tank in the ground is to provide a cool place for it, which reduces vaporization to a minimum. The way this is ordinarily done is BAD PRACTICE. The proper way to do it is to provide an underground chamber something similar to a cistern. This chamber should be large enough so that when the tank is placed in the center there is room enough all around it to admit of thorough inspection.. It should be walled up with brick and cemented so as to exclude water, and covered in such a manner as to admit of easy access.

421. If the tank is to be placed on top of the ground outside of the building in which the engine is located it should be protected from the heat of the sun by putting a small building over it.

422. Storing gasoline in a wooden barrel is not economy by any means. The wood

is porous enough to allow considerable loss by vaporization.

423. When gasoline is exposed to air that is above the freezing point it gives off a vapor or gas which mixes or blends with the atmosphere, and if exposed long enough the quantity so exposed will all disappear or pass off into the air in the form of vapor, leaving only the paraffine residue or other sediment.

424. Several manufacturers of gasoline advise me that common stove gasoline is especially purified and does not originally contain any residue.

425. It would therefore appear that stove gasoline, which is ordinarily supposed to test about 74 degrees, is the quality best adapted for use in the gasoline engine, although the writer has knowledge of engines running successfully on gasoline testing anywhere from 60 degrees to 88 degrees.

426. DISTILLATE, which might be called a low grade of gasoline, and which we are advised tests about 55 degrees, is successfully used to operate the majority of gas engines in California.

427. Much of the RESIDUE or oily substance which accumulates in the bottom of a gasoline tank is, in my opinion, due to the use of unclean barrels or tanks in which it is confined for storage or shipping purposes.

428. Another method of getting rid of this oily substance is to regard it as so

much "dirt" and occasionally pour off all the gasoline and clean the container thoroughly from all sediment.

429. Gasoline engines often refuse to operate successfully on account of this sediment blockading some part of the supply passage between the tank and the engine.

430. Unfortunately the consumer of gasoline occupies the same position in the purchase of gasoline as the consumer of milk does in its purchase. They both buy "dirt." The only difference is that the latter after buying it is expected to digest it as well.

431. In case of fire due to gasoline, use fine earth, flour or sand on top of the burning liquid. Never use water; it will only serve to float the gasoline and consequently spread the flame.

432. GASOLINE TANK EXPLOSIONS are often due to the pressure within a tightly closed container, caused by high temperature, which vaporizes or gasifies the liquid within.

433. The changing of the liquid to the gaseous state causes expansion, and if there is no vent or safety valve connection the pressure within raises to a point suficient to cause an explosion.

INDEX.

—o—

	Paragraph.	Page.
Anchor Bolts in foundation	120	34
Anchor Bolts—How to set them	122, 124	34
Anchor Bolts, length of	120	34
Anchor Plate	121	34
Adjustable flame for Hot Tube	176, 177	46
Area of Valves	251, 258	63, 64
All charges taken should be ignited.	301	75
All senses used for detecting irregularities	304, 305	76, 77
Actual Horse Power	383	94
Benzine	5, 409	6, 101
Birth of the Gas Engine	9	6
Base, construction of	35, 36	13, 14
Brass Boxes or bearings	40, 41	14
Babbbit Boxes	40, 41	14
Balancing an Engine	66 to 74	20, 21
Bolts for Foundation	120	34
Bag, gas	143, 144	38, 39
Burner for Tube Ignitor	172	45
Buttery Connections	192	49
Battery, fluid cell	193	50
Battery, dry cell	194	50
Bad Running Engine	203	52
Binding Post	185, 186	48
Battery, life of	293	73
Battery, how to revive	296, 298	74
Barking noise in cylinder	310, 313	78, 79

	Paragraph.	Page.
Back-firing, its causes	332, 334	83, 84
Bound boxes	352	88
Babbiting a box	359	89
Busted cylinder jacket	364	91
Brake horse power	385, 386	95
Brake test for power	388 to 396	95, 96
Combustion	2	5
Compression	2	5
Charge, gas and air	2	5
Construction of two-cycle engine	15, 16, 17, 18, 19	8, 9
Cylinder construction	27 to 34	12, 13
Cylinder walls, how thick	34	13
Crank pin center	40	14
Crosshead construction	43	15
Cylinder rings, purpose of	48, 54	16, 17
Coughing noise in cylinder	55, 310, 313	18, 78
Connecting rod	56 to 59	18
Crank shaft	60 to 66	19, 20
Crosshead box	59	18
Contact spark	88, 89	26
Cellar for engine room	110	31
Cap stone or timber	117	33
Circulating pump	139	38
Coooling fan	139	38
Connecting gasoline tank to engine	145 to 151	39, 40
Chimney for tube ignitor	170, 171	45
Current breaker	178	47
Cleanliness	205	52
Compression relief lever	219	56
Compressed air starter	229 to 235	58, 60
Compression and its relation to power	242	61
Compression space, size of	244	61

	Paragraph.	Page.
Compression pressure	245, 246	61, 62
Constricted valve passage kills power	251, 258	63, 64
Cooling the cylinder	275, 278	68
Cause of defective ignition	285, 303	71 to 76
Character of igniting spark	295	74
Cylinder, pounding in	306 to 326	77, 82
Causes of preignition	308 to 312	78, 79
Crosshead knock	314	79
Choked inlet passage	328, 330	82, 83
Cold weather affects starting	335 to 337	84
Causes for slower speed and stopping	346	86
Cut boxes or bearings	357	89
Cylinder, interior of	380, 381	94
Distillate	5	6
Diameter of crank shaft	66	20
Diameter of fly wheels	67	20
Double cylinder or balanced engine	73, 74	21
Damp cellar unfit for engine room	110	31
Dimensions of foundation	116	33
Depth of foundation	115	32
Dry battery	184	50
Dynamo for spark ignition	195	50
Defective ignition	285	71
Dynamo current tested	299	75
Dynamo fields should run cool	300	75
Difficult starting	335, 340	84, 85
Distillate	126	105
Danger in handling a gas engine	377 to 379	93
Danger from gasoline	419 to 433	104, 106
Explosion	2, 3	5
Expansive force	3	5

	Paragraph.	Page.
Explosive force	7	6
Electric spark ignition	88 to 99	26
Electric points, terminals or electrodes	90 to 94	26,27
Engine room	203 to 206	52, 53
" "	109 to 111	31
Exhaust connections	152	41
Exhaust mufflers	153	41
Exhaust into a flue or chimney	154, 155	41
Exhaust into well or cistern	157	42
Exhaust into box	159, 160	42
Electric ignitor	178 to 201	47 to 51
Electric connections	185 to 191	48, 49
Electric spark for igniting purpose	181	47
Engineer for sure	204 to 218	52 to 56
Engine hard to start; why?	214	55
Engine should run empty at first	236, 239	60
Engine shuts down when too much fuel	236 to 242	60, 61
Economy under full load	279	68
Electric current tested	289	72
Exhaust sounds a guide to improper running	304, 305	76, 77
Engine slows up and stops	346	86
Exploring interior of cylinder	380, 381	94
Fuels used in gas engine	4, 5	6
Four-cycle principle	11	7
Fly wheels, weight and diameter	67	20
Foundation for gas engine	112	32
Foundation, "any old floor"	112	32
Foundation, object in	114	32
Foundation, depth of	115	32
Foundation, demensions of	116	33
Foundation, height of	118	33

Foundation, concrete	119	33
Foundation, capped with stone or timber	117	33
Feeding gasoline by gravity	145, 146	39
Feeeding gasoline by pump method	147, 148	40
Fire insurance companies require pump method	151	40
Fluid battery	193	50
Fuel consumption	274, 283	68, 70
Fuel consumption under full load	280	69
Fuel consumption in relation to speed	281	69
Fuel consumption guarantee	282, 283	69
Fuel consumption, rules to follow	283	70
Fields of dynamo should run cool	300	70
Firing every charge taken	301	75
Feed more fuel	334	84
Feed less fuel	347, 348	87
Freeze up water jacket	364	91
Fire resulting from gasoline	431	106
Gasoline	5, 409 to 433	6, 102
Gas, natural	5	6
Gas, artificial	5	6
Gas engine	1, 7	5, 6
Gasoline engine	7	6
Gasoline, atomized or vaporized	8,335 to 337	6, 84
Governor, types of	100	28
Governor, hit and miss	101 to 106	29
Governor, throttling	104 to 106	30
Gas pipe connections	140 to 144	38
Gas regulator	141, 142	38
Gasometer	142	38
Gas bag	143, 144	38, 39
Gravity system of feeding gaso-		

	Paragraph.	Page.
line	145, 146	39
Gasoline tank, where located	145 to 157	38, 40
Gasoline, too much	240 to 242	60, 61
Gasoline, how much engine should use	275	68
Gas, natural, how much engine should use	275	68
Gas engine troubles	284	71
Gasoline, slow vaporizing	335 to 337	84
Ground joints leaking	341	85
Grinding valves	370 to 376	92, 93
Gasoline, how produced	409 to 412	102
Gasoline, sediment in bottom of tank	414, 416, 417	103
Gasoline purified	414, 428	103, 105
Gasoline tank, best to use	418	103
Gasoline tank, protect from sun's rays	419	104
Gasoline tank, burial in ground	420	104
Gasoline tank explosions	432, 433	106
Hydro-carbon	6	6
Hydro-carbon engine same as gas engine	7	6
Weight of base	36	14
Hot wrist box	61	19
Hit and miss governor	101 to 106	29
Height of foundation	118	33
How to line an engine with line shaft	126 to 128	35
How to line up exhaust connections	161, 163	42
Hot tube ignitor	167, 177	44, 46
Hard starting engine	214	55
High compression	246	62

	Paragraph.	Page.
High compression cause preignition	245, 247	62
How much gasoline engine should use	275	68
How much gas engine should use	275	68
How to test electric current	289, 290	72, 73
How to test sparker insulation	291	73
How to revive battery current	296, 299	74
Hot boxes	358, 63	89, 19
How to patch leaky cylinder jacket	368, 369	92
How to grind a valve	370 to 376	92, 93
How to start a gas engine	379	97
How to stop a gas engine	398	98
Horse power explained	382 to 387	94, 95
Horse power, actual	383	94
Horse power, indicated	384	94
Horse power, brake	385, 386	96
Initial pressure	3	5
Igniting mechanism	86, 87	25
Ignition, electric spark method	87 to 99	26
Insulation of stationary terminal or points	93, 95, 96	27
Insulating material	96	27
Installing a gas engine	107, 111	30, 31
Igniting tube contains burnt gases	175	46
Ignition too early	286, 287	71
Ignition with hot tube	286	71
Ignition with electric spark	287	71
Insulation tested	291	73
Ignite every charge admitted	301, 303	75, 76
Inlet passage choked	328, 330	82, 83
Ignition gradually fails	344	85

	Paragraph.	Page.
Indicated horse power	384, 387	94, 95
Indicator	387	95
Illustration of engine connections		100
Journal box construction	38 to 41	14
Jump spark	89	26
Kerosine engine	7	6
Kiss spark	98	28
Knock at crosshead or wrist	314, 315	79
Length of piston	44, 45	46, 15
Lining up engine shaft	126 to 128	35
Loss of power by radiation	138	38
Length of ignition tube	169	44
Lack of power in explosions	222	57
Lubricating valve stems	266, 267	66
Lubricating cylinder	269	67
Lubricating wrist boxes	272	67
Lubricating frictional parts	268	67
Life of a battery	293	73
Loss of power	323, 326	81
Leaky valves	323, 325	81
Leaky cylinder rings	326	81
Leaky joints	341	85
Leaky valve stems	342	85
Liners	353, 354	88
Lime in water jacket chamber	261	90
Leak in cylinder jacket	264	91
Motor	1, 7	5, 6
Mixture of gas and air	1, 7	5
Making and breaking the electric current	90, 91	26
Movable and stationary terminals or contact points	97, 98	28
Magneto for igniting purpose	195	50
More power, more fuel	242	61
Misfiring	301, 303, 327	75, 82

	Paragraph.	Page.
Naptha engine	7	6
Natural water circulation	135	37
Naptha	409	102
Oil, kind to use for cylinder	208, 209	53
Oiling valve stems	210, 266, 267	53, 66
Oiling the gas engine	208	53
Oiling frictional parts	268	67
Oiling cylinder	269	67
Oiling wrist boxes	272	67
Obstinate starting	335 to 340	84, 85
Overcharging with fuel	335, 337	84
Prime mover	1	5
Pressure in the cylinder	3	5
Parts necessary to a gas engine	24, 25	11
Piston, how constructed	42 to 47	14,15, 16
Piston rings, same as cylinder or packing rings	48 to 54	16, 17
Pitman	56 to 59	18
Piping up an engine	129	36, 100
Piping water to engine from cooling tank	132 to 135	36, 100
Piping water to engine from hydrant	136 to 138	37
Piping gasoline to engine	145 to 157	39, 40
Preliminaries to starting a new gas engine	203	52
Preignition	247	62
Preignition, causes of	247, 250	62
Preignition cause of pounding	306	77
Preignition, how to test	308, 309	78
Pounding in cylinder	306 to 326	77, 81
Piston cause of pound	310, 316	78, 80
Pins, crosshead and wrist	356	89, 90
Packing	360	90
Power, actual horse	383	94

	Paragraph.	Page.
Power, indicated horse	384	94
Power, brake horse	385, 386	95
Power	382, 387	94, 95
Place equipments where most convenient	406, 407	101
Paraffine oil	414	103
Ring for cylinder, how should be made	48 to 54	16, 17
Room in which to set an engine	109, 111	31
Regulator, gas	141, 142	38
Receiving valve, timing of	262	65
Reviving battery current	296 to 298	74
Sediment at bottom of gasoline tank	414, 416, 427	103, 105
Storing gasoline	422	104
Stopping the gas engine	398	98
Setting the valves	259	64
Spark controled by governor	99	28
Setting the gas engine	107	30
Scavenging engine	165	44
Scavenging, how done with exhaust	166	44
Switch or current breaker	178 to 183	47, 48
Spark coil	179	47
Spark coil, its purpose	181, 182	48
Spark or igniting dynamo	195	50
Spark or igniting magneto	195	50
Steam cylinder oil not good for gas engine	209	53
Starting gas engine	211, 397	54, 97
Starting cup	213	54
Starting by hand	212	54
Starting relief lever or valve	219	56
Starting by one-half turn of the wheel	220, 221	57

	Paragraph.	Page.
Starting with air pump	223	57
Starting with match igniter	224 to 228	58
Starting with compressed air	229 to 233	58, 59
Starting with light air pressure	234	59
Starting, causes of difficult	335 to 340	84, 85
Sparker points, how to time	263, 264	65, 66
Sparker insulation tested	291	73
Short circuit explained	288	72
Spark coil, short circuit in	294, 295	74
Sounds confounded with pounding	307, 317	77, 80
Speed gets lower, engine stops	346	86
Smoke at end of exhaust pipe	347	87
Smoke from the cylinder	349, 351	87
Setting a box	355	88
Two-cycle engine and how it operates	15, 20 to 23	8, 11
Two compression chambers in a two-cycle engine	15	8
Thickness of cylinder wall	33, 34	13
Timing the spark	97	28
Throttling governor	104, 106	30
Templet	123	34
Tube ignitor described	167 to 177	44, 46
Turning the wheels over compression point	219	56
Turn! Turn! Turn! and no start	214 to 218	55, 56
Timing the valves	259	64
Test engine to see if valves and ignitor are in time	261	65
Timing the igniting points	263, 97	65, 28
Timing the receiving valve	262	65
Timing the exhaust valve	265	66
Troubles encountered with gas engine	284	71

	Paragraph.	Page.
Testing the electric current	289	72
Testing dynamo current	299	75
Thumping in cylinder, causes of	317	80
Testing leaky valves	346	87
Testing power of engine	388, 396	95, 96
Unnatural sounds detected	319, 322	81
Valve ports, location of	28, 29	12
Valves and their location	75 to 86	22
Valves, type of	75	22
Valves, Manner of operating	75 to 78	22
Valves, chambers should be bolted on cylinder	78, 79	23
Valve, exhaust should be watered	80	23
Valve, gas and gasoline combination	81, 82	23
Valve, gas	83	24
Valve, gasoline	84, 86	24
Valve in water connection	131	36
Valve stem should not be oiled	210	53
Valve areas	251 to 258	63
Valves, how to time them	259	64
Vaporizing gasoline in cold weather	335 to 337	84
Valves, how to grind	370 to 376	92, 93
Why four cycle engines are preferred	13, 14	8
Weight of piston	44 to 47	15, 16
Wrist pin, size of	64	19
Wiping spark	98	28
Water connections	130, 403, 405	36, 100
Water connections, valves in	131, 132	36
Water connections with cooling tank	132 to 135	37
Water connections with hydrant	136, 137	37
Water supply	207	53

	Paragraph.	Page.
Water for cooling purposes	275 to 278	68
Water temperature	275, 278	68
Water too cool	277	68
Water in cylinder	339, 340	85
What method of ignition is best	196	50
Why are gas engines hard to start	214	55
Weak explosions	345	86

THE "LAMBERT" ENGINES.

Gas and Gasoline,

Portable and Stationary.

Stationary—1 to 50 Horse Power.
Portable—2 to 25 Horse Power.
They are sold on their merits.
They have a good reputation.
They are always ready.
They start easy.
They continue to run after they are started.
They work early and late.
They will please you.

We Guarantee the "Lambert"

To run successfully or no pay. To use not more than one gallon of 74° gasoline in ten hours to each indicated horse-power, nor more than eighteen cubic feet of natural gas per indicated horse-power per hour. To pull their full rated horse-power. To be made of the best material procurable and by the best mechanics.

All Engines are Thoroughly Tested

Before leaving the factory, and will run on Natural Gas· Artificial Gas, Gasoline or ‹ istillate. We warrant all engines to work successfully and agree to furnish, free of charge, any part that may turn out defective, either in material or workmanship.

The Price is right. Ask for it. We want your order. Send for our illustrated catalogue. FREE for the asking.

THE LAMBERT GAS AND GASOLINE ENGINE CO.,

ANDERSON, IND.

THE BLAKESLEE

Patent Automatic

FRICTION CLUTCH

For Gas and Gasoline Engines.

A GOOD THING,

(See Opposite Page.)

And you should have one. Applicable to any Gas and Gasoline ENGINE.

WE believe that to the practical man the advantages of this Clutch, which, in the true sense of the word, is automatic, are self-evident. The engine is turned over without any load on it, and when the engine is at about half speed, the clutch automatically takes up the load without any attention, shifting of belts or levers. When the engine is shut down, as the speed falls the load is released, and everything is in readiness to start next time.

This Clutch is equally applicable whether the engine be belted or directly connected, and is neat, compact, powerful and positive, doing away entirely with tight and loose and wide-faced pulleys.

Printed Matter and Prices on Application.

THE BLAKESLEE MFG. CO.,

BIRMINGHAM, ALA.

ST. LOUIS, MO. DALLAS, TEXAS.

Remy Electric Co.'s Magnetto Dynamo

—FOR—

Gas and Gasoline Explosive Engines.

An Absolutely Reliable Gas Engine Igniter. Better than Battery or Hot Tube and much less expensive. No Attention. Large Variation of Speed permissable without annoying Governing device.

The Remy Electric Co.'s Magnetto Dynamo has been built after carefully considering the advice of engine manufacturers, and is not only dirt, oil and waterproof, but its construction, both from an Electrical and Mechanical standpoint, is of the highest grade.

Write for prices and descriptive matter.

REMY ELECTRIC CO.,

ANDERSON, IND., U. S. A.

JUST WHAT YOU WANT!

A One Horse Powe· Gas or Gasoline ENGINE and a HANDY PUMP JACK that can be clamped to any force pump head. We sell the whole outfit at the

RIGHT PRICE.

JUST THE THING!

PAT'D. Catalogue and Circulars FREE. Write to the Manufacturer.

CHARLES BRUNNER,
Peru, Ill's.

THE AUTO-CARBURETTOR

Will furnish the proper mixture for any Gasoline Engine.

It can always be depended upon.
Simple in Construction and Operation.
Made for Motor Cycles, Automobiles, Launches, and Stationary Engines.

Write for full information and prices.

THE AVERY & JENNESS CO.,
No. 56 South Canal St.,
CHICAGO, ILL.

THE "NEW ERA"

Gas and Gasoline Engines.

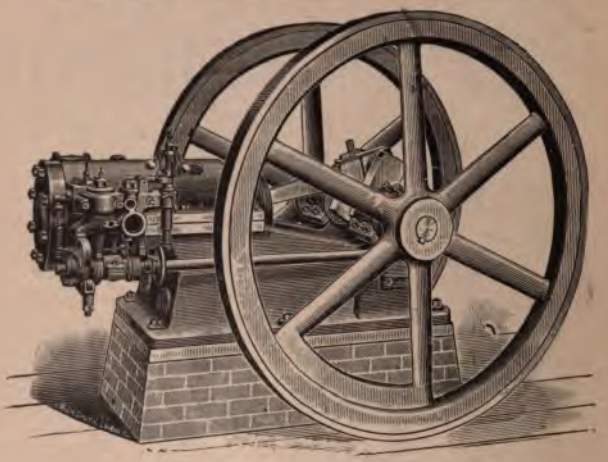

Sizes, 5 to 125 Horse Power.

Single Cylinder, 4-Cycle, Horizontal,
Heavy Weight and Slow Speed.
Simple Electric Igniter,
Geared Governor.

Manufactured by

THE NEW ERA IRON WORKS CO.,

26 Dale Avenue.

DAYTON, OHIO, U. S. A.

The Apple Igniting Outfit

As Now Perfected.

From an experience of over six years in this line and a factory fully equipped with modern machinery, we are pleased to announce to the manufacturer of gas engines that we now have a capacity of one hundred complete outfits per day. This puts us in a position to offer extra inducements to manufacturers, enabling them to equip their engines with these outfits, thus making a more efficient machine.

The dynamo is entirely enclosed, making it dirt and water proof, self lubricating, and is built for constant running. Provision is made for easy accessibility to its working parts.

THE STORAGE BATTERY.

The Duplex Storage Cell used with this outfit is the result of years of experience with batteries. It has no rubber or glass jars to break or leak. It is entirely sealed. no evaporation. No creeping salts. No vapor to eat off wire connections. It is a two cell, three plate battery without a single joint. Can be carried in stock without deterioration.

THE DAYTON ELECTRICAL MANUFACTURING CO.,
No. 28 S. St. Clair St.,
DAYTON, OHIO.

SPON & CHAMBERLAI
BOOKS ON
Mechanics, Engineering
Electricity, Trades, &c.
12 Cortlandt Street, N. Y